



MEDICAL APPLIANCE DIVISION

Cod.3161

Operation and maintenance manual

STEAM AUTOCLAVE

MODEL

MATIKA NEW



Reverberi Arnaldo S.r.l. thanks you for having bought one of its products and asks you to read this manual.

The manual contains all the information you require in order to use the machine you have purchased. Please carefully comply with the instructions given in the manual and carefully read all its parts. We recommend you to keep this manual in a suitable place so that it remains in a perfect condition.

The content of this manual may be changed without notice and further obligations in order to add changes and improvements to the units already delivered.

This manual contains an installation form which must be fully filled out by the technician when he installs the machine.

This form will be considered the reference certificate that validates the warranty. It must be sent back to us along with the printer coupon and warranty form.

Duplication or translation of any part of this manual is forbidden unless prior written authorization has been obtained from the Manufacturer.

Table of contents:

1. INTRODUCTION	3
2. TECHNICAL SPECIFICATIONS	4
3. GENERAL RECOMMENDATIONS	6
3.1 Regulations for the operator	6
4. LOCATION OF THE CONTROLS	7
5. STARTING AND SETTING AT WORK	8
5.2 Installation and preliminary inspections	10
6. GENERAL INSTRUCTIONS FOR USE	12
6.1 Method of use	12
6.2 End of work	13
6.3 Control panel	13
7. HOW TO ARRANGE THE INSTRUMENTS FOR THE STERILIZING PROCESS	14
7.1 Standard sterilizing	14
7.2 Sterilizing handpieces	14
8. STERILIZING CYCLES	15
8.3 Sterilizing table	15
8.2 Notes and warnings	16
9. UNLOADING	17
9.1 Troubleshooting: Solutions / Remedies	17
10. MAINTENANCE	19
10.1 General maintenance	19
10.2 Daily routine maintenance	19
10.3 Weekly routine maintenance	19
10.4 Monthly routine maintenance	20
10.5 Periodic extraordinary maintenance	20
ELECTRICAL SYSTEM	23
HYDRAULIC PLANT	25
FORM TO FILL OUT WHEN APPLIANCES ARE RETURNED FOR REPAIRS	26
WARRANTY	28
DECLARATION OF CONFORMITY	31

1. INTRODUCTION

The machine described in this operation and maintenance manual is a steam sterilizer that has been specially designed to sterilize of laboratory equipment.

The machine can either operate at a temperature of 134°C and a pressure of 2.1 Bar or 121°C and a pressure of 1.1 Bar. These parameters are monitored and kept at constant levels by three mechanical and electronic devices that ensure an optimal sterilizing process along with total safety.


The operating cycles can be monitored by means of the pressure gauge, warning lights and by the position of the controls.

SYMBOLS AFFIXED TO THE MACHINE		WARNING: IDENTIFIES A HEAT SOURCE. A PART COULD BE DANGEROUSLY HOT
		WARNING: IDENTIFIES A GENERIC DANGER. THERE COULD BE A POTENTIALLY DANGEROUS CONDITION
		IDENTIFIES THE GROUND CONDUCTOR



Do not use the machine for purposes other than those for which it has been built.

To prevent the autoclave from being subjected to electrical disturbance, it is important to make sure that the earth resistance value is sufficient and well coordinated with the protections in your electrical system.

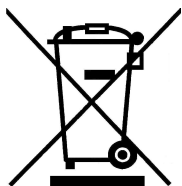

- This symbol it means the product is covered by the European Directive 2002/96/EC.
- Please inform yourself about the local separate collection system for electrical products.
- Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

2. TECHNICAL SPECIFICATIONS

MATIKA NEW has been designed and built in compliance with the operators' need for functionality, practical use and safety.

MATIKA NEW has functional characteristics that make it unique, i.e.:

- Main switch to power the machine.
- 60 minute cycle program.
- Five minute final drying phase.
- Switch to select the 121° or 134° cycle.
- Fully visible water filling from the top.
- Built in drying cycle with evaporation system.
- Continuous venting of the air in the chamber to encourage the maximum steam saturation.
- Approved safety valves to prevent over-pressures.
- Safety valve to protect the heating element.
- Safety thermostat to monitor the drying operation.
- 121° - 134° operating pressure switches.
- Chamber in seamless press-molded 18/10 STAINLESS STEEL.
- 16 liter chamber capacity able to hold up to 5 trays.
- Autoclave supply tank in 18/10 STAINLESS STEEL.
- Condensation radiator to drain off the water at the end of the cycle.
- Used water can

Description	Unit of measurement	Values
-------------	---------------------	--------

Power source voltage rating	V	230 V.a.c. ~
Power source frequency	Hz	50/60
Machine power rating	W	1500
Boiler volume	mm	Ø 240 x 340
Operating pressure	Bar	2.1 - 1.1
Machine dimensions X, Y, Z	mm	510 x 450 x 390
Gross weight	Kg	48
Pack dimensions	mm	640 x 580 x 560
Operating temperatures	°C	+ 3°C.....+ 35°C
Distance from walls	cm	50

X = depth

Y = width

Z = height



The electrical system is protected against the risk of over-currents by two 15 A 6,3x32 delayed action fuses (T 15 A) installed inside the machine.

Only have these fuses changed by a skilled electrician.

The machines have been designed to operate up to an altitude of 1200 mm above sea level. Contact the manufacturer if the machine must operate at a higher altitude as special models and/or devices may be required.

The noise level of the machine has been tested. The continuous equivalent weighted acoustic pressure level A is less than 70 dB (A) and the continuous equivalent weighted acoustic power level A does not exceed 85 dB (A). The measured noise level measured is therefore very low. For this reason, the operator need not take any particular measures (also in view of the fact that the machine operates automatically).

DATA AND SPECIFICATIONS OF THE PRESSURIZED VESSEL:

Serial N° of vessel, Serial N° of door	Month N°, Year N° (see internal label)
Max. operating pressure:	2.2 Bar
Max. operating temperature:	160°C
Test pressure:	8 Bar
Reference standards:	TRD 421
Volume of vessel:	16 l.

3. GENERAL RECOMMENDATIONS

3.1 Regulations for the operator

- Always wear personal protective equipment in compliance with the directives that establish the current accident-preventing provisions.
- Do not approach the machine with inflammable materials.
- Do not carry out repairs or maintenance work whilst the machine is operating or plugged into the electricity main or when parts of it are hot.
- Only responsible adults may use the machine in places inaccessible to children.
- Use the machine in a dry place, sheltered from the rain.
- Not recommended to be put on the machine any material nor solid nor liquid.
- Periodically inspect the power cable to make sure that it is in a good condition.
- If there are several persons in the place of work, remember to keep at a safe distance from the machine
- to prevent accidental contact with hot parts.
- Never ever operate the appliance unless the power cable is in a perfect condition and the structure
- undamaged.
- It is advisable to keep the door half-open when the appliance is not in use.
- Do not move the machine when the tank is full of water.



Pay the utmost attention to those parts of the appliance that become hot during operation and that still remain hot after it has been switched off. Keep your face well away from the top part of the machine when the door is opened to prevent it from being scalded by steam. Keep about 50 cm. away from the machine when opening the door.


As specified in the technical specifications, these autoclaves operate at a pressure that can reach 2.2 Bar at most. Do not use the autoclave in an improper way and do not carry out maintenance operations while the sterilizing cycles are in progress. Remember that the pressure is shown by the pressure gauge installed on the front of the machine itself.

Wait at least 20 minutes after the appliance has been switched off, to allow the boiler to completely cool.

4. LOCATION OF THE CONTROLS

Autoclave mod. **MATIKA NEW** features an elegant casing treated with scratch-proof epoxy powder paint in the **RAL 7035 COLOUR**. No particular preparations are required to operate the machines. Just fit the plug into a 230 V power socket. The power draw of the machines is **1500 Watt**. The control panel is elegantly designed, easy to read and consists of (see page 9):

- 1 - **WATER SUPPLY TANK**
- 2 - **OVERFLOW UNION**
- 3 - **SWITCH TO ALLOW WATER TO FILL THE TANK**
- 4 - **WARNING LIGHT TO INDICATE THAT CHAMBER IS FILLING WITH WATER**
- 5 - **WARNING LIGHT TO INDICATE DRYING CYCLE IN PROGRESS**
- 6 - **134°C CYCLE INDICATOR LIGHT**
- 7 - **121°C CYCLE INDICATOR LIGHT**
- 8 - **CYCLE PROGRAMMER TIMER**
- 9 - **PRESSURE GAUGE**
- 10 - **MAIN SWITCH**
- 11 - **TANK WATER DRAIN COCK**
- 12 - **CYCLE SELECTOR SWITCH**
- 13 - **DOOR OPENING DEVICE**

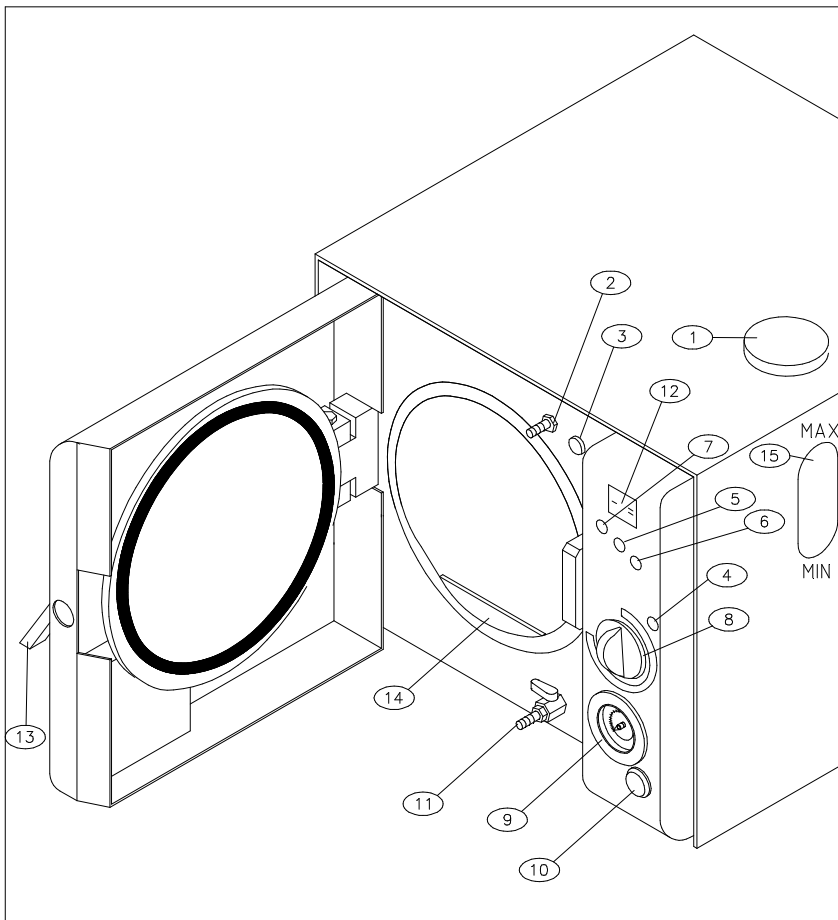

THE FOLLOWING ACCESSORIES ARE SUPPLIED:

1 TRAY HOLDER, 4 TRAYS, 1 TOOL TO TAKE OUT THE TRAYS AND ADJUST THE DOOR, 1 PIPE FOR WATER FILLING, 1 SPONGE, 1 INSTRUCTION MANUAL, 1 10 LITER CAN, 1 LIFTING HANDLE.

5. STARTING AND SETTING AT WORK

5.1 Removing the machine from the packing

The machine is consigned packed on a wooden pallet out a cardboard box: make sure that there are no dents and that the wrapping is in optimum conditions.

The machine must be stored in a dry place, sheltered from adverse weather conditions, at a temperature between +3°C and +35°C.

The machine must be handled without jolting and using appropriate means.

Open the pack without overturning it.

Remove the polystyrene from the top and sides (the weight of the model is given in chap. 2, technical specifications).

Lift the machine out of the box in a vertical direction using the 2 hooks supplied in the bag inside the pack. These should be inserted into the two holes at the sides of the casing (**see drawing on page 11**). Remove the pluriball wrapping from around the machine and make sure that all parts of this latter are undamaged and complete with all the accessories indicated on the consignment note. Immediately notify our dealer if discrepancies are discovered.

Keep the packing materials for as long as the machine remains in use, not just for the warranty period. This is because the autoclave may need to be calibrated or regulated by the manufacturer's staff or by an after-sales center. Non-original packing is unable to ensure that the machine is correctly protected during transport.


The original packing comprises the following items:

- WOOD CASE
- PACK DIMENSIONS 550x650x560 (Width x Length x height)


CEN STANDARD DIN EN 285	Maximum value
Evaporation residue	10 mg/l
Silicon dioxide (SiO ²)	1 mg/l
Iron	0.2 mg/l
Cadmium	0.005 mg/l
Lead	0.05 mg/l
Heavy metal residues (barring iron, cadmium, lead)	0.1 mg/l
Chloride	2 mg/l
Phosphate	0.5 mg/l
Conductivity (at 20°C)	15 µs/cm
pH value	From 5 to 7
Appearance	Colourless, clean and sediment free
Hardness	0.02 mmol/l

NOTE: The use of water containing higher concentrations than those indicated in the table above could considerably reduce the life of the equipment, causing serious damages to its components and consequently annulling the warranty.

DRAWING ILLUSTRATING HOW THE MACHINE MUST BE LIFTED FROM THE PACK

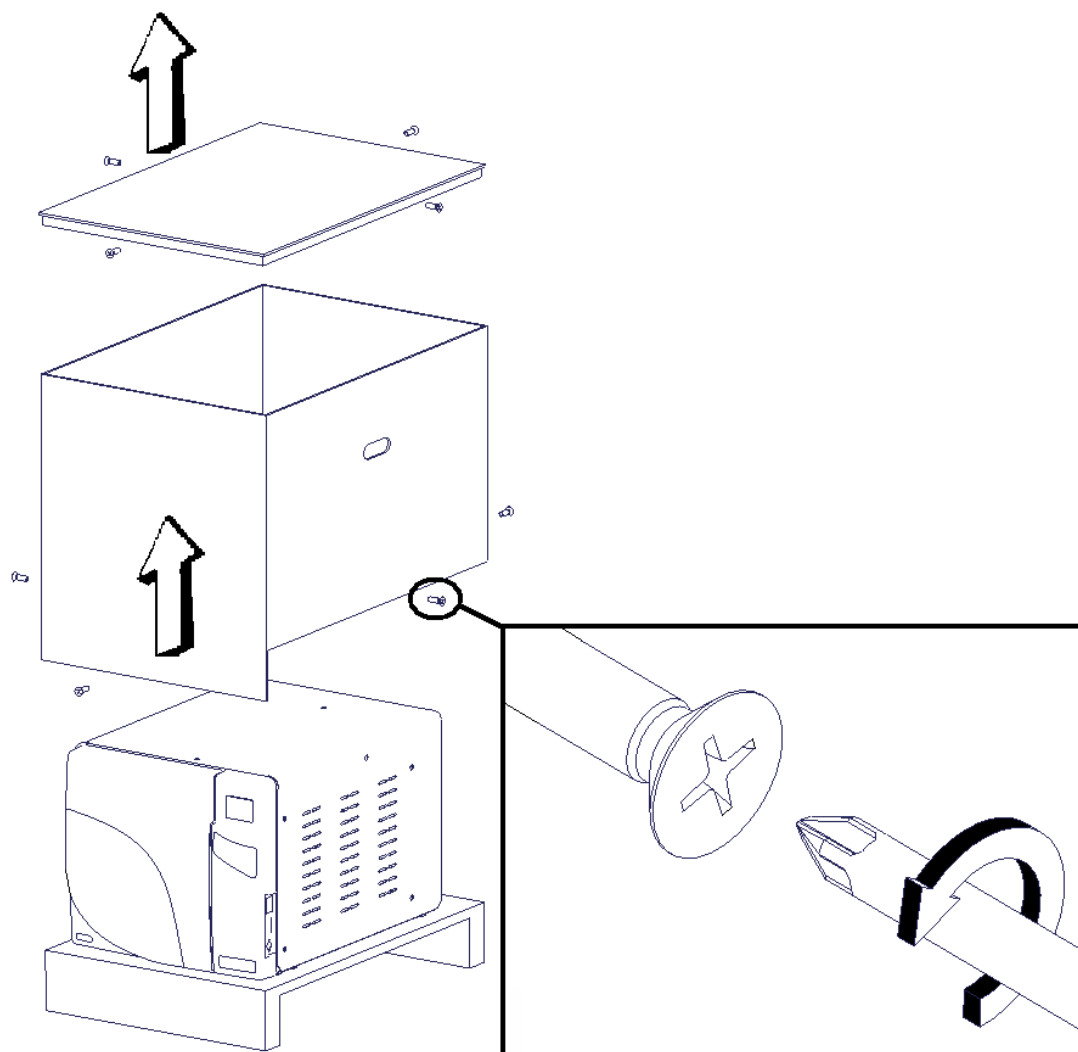

Unscrew all the screws of the package as shown, then remove the cover first and then the chest. Lift the autoclave as suggested by the images on the reverse.

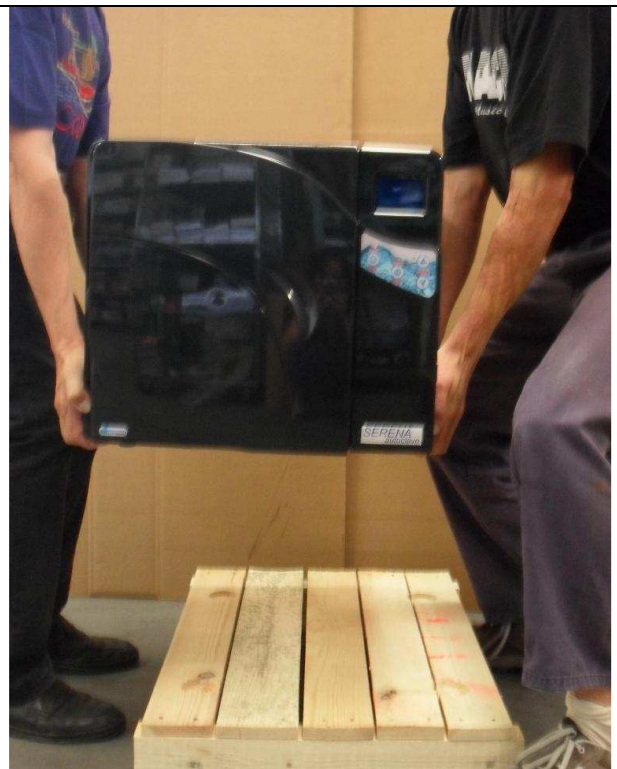

5.2 Installation and preliminary inspections



The installer is obliged to make sure that the place in which the sterilizer is installed is fit for that purpose (CEI 62/4).

The machine is sent packed on a wooden pallet. Make sure that the packing has not been damaged and that everything is in a perfect condition. Handle the box by means of its handles and place it on a surface in the immediate vicinity of the place in which the machine is to be positioned (the weight of the model is given in chap. 2, in the technical specifications).

Remove the machine from its wrapping by pulling it out of the box vertically, using 2 hooks (available on the market) inserted into the two holes at the sides of the casing. Remove the polystyrene filler balls from around the machine. Make sure that none of the parts has been damaged and that the machine is complete with all the accessories indicated in the consignment note. Immediately contact our reseller if discrepancies are discovered.

All the packing materials must be kept for guarantee purposes. Machines returned without their original packing will not be accepted.

Install the autoclave in a well ventilated place, well away from sinks, heat sources, grinders and from all other machines that create vibrations and/or dust.

Place the autoclave delicately on to a perfectly flat surface. Take care to leave a space of about 5-10 cm all around the machine to allow for aeration.

Autoclave mod. **MATIKA NEW** must be installed in a well lighted place equipped with an electrical system that complies with the current standards in force.

Remember that **MATIKA NEW** cannot be built into other furniture as it is filled with water from the top.

Fit the electric plug into a socket **WITH A CAPACITY OF AT LEAST 16 Ampere AND EQUIPPED WITH AN EARTH CONNECTION**. Make sure that the mains voltage rating corresponds to the value indicated on the label at the rear of the machine (230 Volts).

MATIKA NEW must only be filled with **DISTILLED WATER** to ensure that the electrical and air-operated devices operate efficiently and are long lasting.

Carry out a cycle of dry-run tests using one indicator (type TERMALOG or VAPOR LINE EXTENDER). Keep the receipt which should be attached to the installation form and sent off along with the warranty.

Never connect the plug of the machine to a reduction.




Do not install the machine in places at altitudes of more than 1200 m. above sea level.

If this is the case, contact the manufacturer for a special version of the machine.

Use a bubble level to make sure that the surface on which the appliance is to be positioned is perfectly horizontal.

Fill out and send off the warranty form.

DESCRIPTION OF THE REAR PART

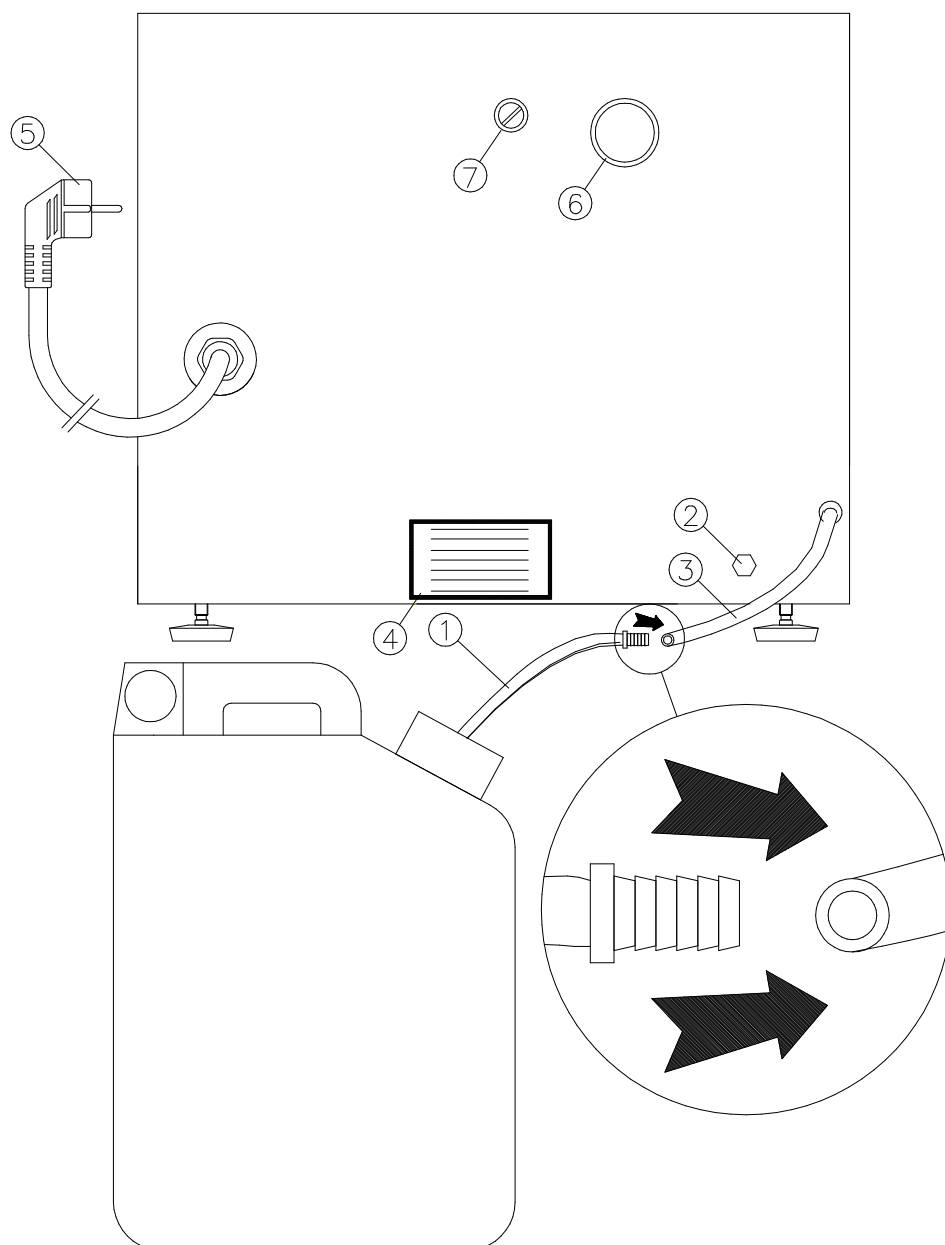

- 1) Can.
- 2) Generator drain.
- 3) Water drainpipe used for connecting to the can through "1". The same pipe can be used for draining into the sewage system.
- 4) Label showing the following data:
Model, CE mark, power voltage and frequency, power input, serial number, year of manufacture, manufacturer's details.
- 5) Power cable with Shuko France plug.
- 6) Safety valve.
- 7) Safety dry.

6. GENERAL INSTRUCTIONS FOR USE

6.1 Method of use

1. Open the water tank lid (1). Fill the tank with distilled or demineralized water until reaching the MAX (15).
2. Open the door using handle (13).
3. Turn on the appliance using the main switch (10).
4. Place the instruments on the supplied Trays without overlapping the packets. The maximum load is 3 Kg.
5. Keep button (3) depressed to allow water to enter the chamber [check indicator light (4)]. When the water reaches the upper edge of the panel 814) in front of the chamber, release the button (3) and make sure that the indicator light (4) is off.
6. Shut the door using the handle 813).
7. Select the required sterilizing cycle with button (12).
8. Select the required sterilizing time (8). It may vary depending on the load of instruments, the type of material and the temperature of the internal chamber [cycle start with autoclave hot or cold].
9. To dry the instruments in the correct way, it is advisable to purchase our accessory M9050 "vertical packet support" which can hold up to 20 packets. If the supplied Trays are used, only use the perforated ones. Arrange the packets with the transparent plastic part pointing downwards to facilitate the drying operation.
10. If very delicate articles are sterilized, it is advisable to remove them immediately after the cycle has terminated or even during the drying phase (5), after having made sure that the pressure gauge (9) has set to "0" position.
11. Whenever a cycle is carried out, place an indicator in the sterilizing chamber to make sure that sterilizing has taken place (type TERMALOG, VAPOR LINE EXTENDER or PERFORM ST).
12. When the timer reaches the (8A) position, the drying cycle will begin (5) and the water will be drained from the chamber.
13. The sterilizing process will have terminated when the timer reaches "0" position. It will now be possible to cautiously open the door after having made sure that the pressure gauge (9) has set to "0" position.
14. The machine will switch off automatically at the end of the cycle. A "vacuum" may form if the door is not opened immediately, making it difficult to open the door (see point (o)).
15. Set the select (12) to "0" position. Set selector (8) to pos. 3. The green warning light (5) will come on and air will enter the chamber to make the door easier to open.
16. If the instruments are still wet after they have been sterilized, proceed in the following way to complete the drying process.
 - leave the door ajar;
 - select cycle 121° or 134° (12);
 - move selector (8) back to pos. 3 (dry);
 - now repeat the drying cycle which will stop automatically.
17. Use the supplied key and wear gloves to remove the objects from the chamber.
18. After the door has been opened, stand about 50 cm from the appliance since there could still be steam inside and this could cause scalding.
19. Open the door with care using handle (13), moving it in an upward direction and watching the pressure gauge (9) which must always remain in zero position. If there are no obstructions, the door can be easily opened by moving handle (13) from the right towards the left..
20. If the door is not opened immediately after the sterilizing cycle has terminated, condensed water vapor may form on its surface and may drip off on opening.

6.2 End of work


After the operations have terminated, set the green main switch (10) to position 0, open the door and leave it ajar with handle (13) in the vertical position..



Pay particular attention to the temperature of the various components when you switch off the machine.

Wait a few minutes to allow the components to cool.

6.3 Control panel

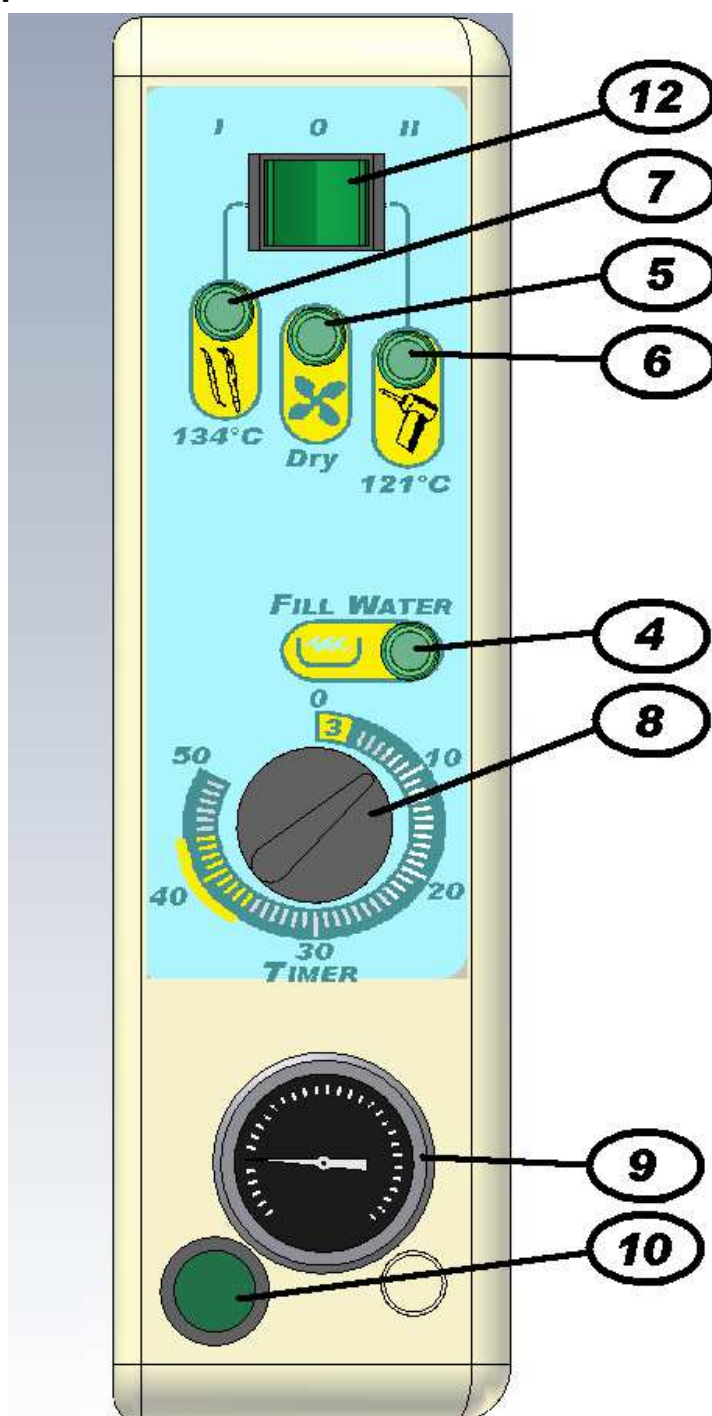

7. HOW TO ARRANGE THE INSTRUMENTS FOR THE STERILIZING PROCESS

7.1 Standard sterilizing

Before being sterilized, the instruments must be cleaned to remove blood residues, incrustations, foreign bodies, etc. These impurities can damage the items being sterilized, the autoclave components and prevent the sterilizing process from being correctly carried out.

These instruments must be made of NON-ferrous material since they could damage the other instruments or the autoclave itself.

To achieve perfect sterilizing, it is therefore important to proceed in the following way:

1. Rinse and brush the instruments under running water immediately after use to remove all deposits.
2. Place the instruments in the ultrasound machine with distilled water and detergent solution if possible.
3. Thoroughly rinse the instruments in demineralized water to prevent scaling stains.
4. Dry the instruments to eliminate all water residues which could lead to oxidation.
5. Wash, rinse and dry the supplied trays and make sure that they are perfectly clean.
6. To ensure that packaged instruments are perfectly dried, we recommend use of support art. M9050 supplied as an optional.
7. If loose instruments must be sterilized, it is advisable to cover the trays with a paper or fabric napkin to prevent direct contact with the tray surface: do not place the instruments straight on to the trays.
8. Scissors and forceps should be slightly opened. Mirrors and containers should be placed upside down for the sterilizing process.
9. It is advisable to keep the instruments separated from each other to achieve a better sterilizing action. Overloading will impair the sterilizing process.
10. If packaged instruments must be sterilized on the trays, place the packets with their transparent side downwards and do not overlap. The packets should not be too large. Drying will be difficult if their edges overlap.
11. The machine can operate with a maximum 3 Kg load.

7.2 Sterilizing handpieces

1. Carefully read the handpiece operation manual with particular attention to the part about sterilizing.
2. Wrap the handpiece in the special sterilizing cloth.
3. Place the wrapped handpiece on a NON-perforated tray to prevent spilt lubricating oil from polluting the pipes of the autoclave.
4. Proceed with a short cycle 121°C sterilizing program.
5. Remember to immediately remove the hand piece from the autoclave at the end of the sterilizing process.
6. It is inadvisable to sterilize handpieces using the night cycle.

It is essential to place a chemical indicator in the autoclave on each cycle, to ensure that the sterilizing process has taken place correctly

8. STERILIZING CYCLES

8.3 Sterilizing table

<i>Cycle</i>	<i>Materials</i>	<i>Max. load (Kg)</i>	<i>Sterilizing minutes with machine</i>	<i>Sterilizing minutes with machine hot</i>	<i>Drying minutes</i>	<i>Operating pressure (bar)</i>	<i>* Effective sterilization minutes not less than</i>
<i>Unwrapped</i> 121°C	- metallic solids - rubber materials - plastic materials - glassware	3	40	30	5	1.1 - 1.2	15
<i>Wrapped</i> 121°	- delicate solids - rubber materials - plastic material - glassware - wrapped	3	45	40	5	1.1 - 1.2	30
<i>Unwrapped</i> 134°	- stainless metallic solids	3	30	25	5	2.1 - 2.2	5
<i>Wrapped</i> 134°	- stainless metallic solids - protected cutters	3	35	30	5	2.1 - 2.2	20
<i>Wrapped handpieces</i> 121°	- wrapped handpieces	1.5	35	30	2	1.1 - 1.2	25

* Until he has acquired enough experience in using the autoclave, the operator must check to make sure that the operating pressure does not last less than the minimum effective sterilization minutes indicated in the table.

Increase the number of minutes that sterilizing must last if these parameters are not complied with. The sterilizing table contains indicative data. It is essential to consult the values established by the manufacturer of the materials to be sterilized and to strictly comply with the sterilizing parameters indicated by the current standards in force.

If the autoclave is used to sterilize instruments contaminated by CREUTZFELDT-JAKOB's disease, use the 134° cycle and sterilize for 50 minutes with a cold start or 45 minutes with a hot start.

It is advisable to use non-packed sterilized materials immediately. Packed sterilized instruments can be placed in a UV glass case to ensure that they remain sterilized (for short periods).

8.2 Notes and warnings

- 1- Strictly comply with the manufacturer's instructions when sterilizing materials.
- 2- To preserve packaged and loose sterilized materials, the trays must be stored in special cabinets fitted with ultraviolet lamps and designed for this specific use.
- 3- If the articles are to be stored for a longer period, it is advisable to use our covered trays code 1474 + 2682 and tray holders code 2631 supplied on request.
- 4- Whenever a sterilizing process is carried out, it is advisable to add a chemical indicator that we can supply on request, code 1468.



U.S. Pat. 5,158,363

VAPOR LINE™ ExtenderLOT NO.
DATE

VAPOR LINE™ **Integratore per la** **sterilizzazione a vapore con** **estensore munito di indicatore**

proper manufacturing co., inc.
36-04 Skillman Avenue, Long Island City, NY 11101

LOT NO. 99222

MFG. DATE / DATA DI FABBRICAZIONE: **1999-10**
EXPIRATION DATE / DATA DI SCADENZA:

DO NOT USE AFTER EXPIRATION DATE **2003-10**
NON UTILIZZARE DOPO LA DATA SCADENZA

STORE AT 15-30 DEGREES C°
CONSERVARE A 15-30 GRADI C°

KEEP IN COOL DRY PLACE IN THE ORIGINAL POUCH
CONSERVARE IN AMBIENTE NON UMIDO E IN
CONFEZIONE ORIGINALE

Reorder No. 269008**250 Integrators****ISTRUZIONI PER L'USO**

1. Posizionare un integratore VAPOR LINE in ogni pacco da sterilizzare. Inserire l'integratore nell'area più resistente alla penetrazione del vapore. Posizionare l'estensore in modo che l'estremità finale dello stesso sporga dall'involucro interno e sia immediatamente visibile una volta che l'involucro esterno sia stato rimosso.
2. Procedere alla sterilizzazione del pacco in autoclave.
3. All'apertura dell'involucro esterno esaminare la punta finale dell'estensore dell'integratore. Se tale estremità è diventata di colore scuro la sterilizzazione è avvenuta in modo corretto; in caso contrario, e cioè tale cambiamento non si è verificato, procedere alla risterilizzazione del pacco.
4. A questo punto estrarre l'integratore dal pacco. Esaminare il VAPOR LINE per verificare che la barra scura abbia superato la zona rossa denominata "FAIL" fino a raggiungere la zona verde denominata "PASS". Questa è la prova che le condizioni di sterilizzazione si sono verificate.
5. Nel caso in cui la barra scura non abbia raggiunto la zona verde "PASS", il processo di sterilizzazione non è stato correttamente completato. L'intero pacco dovrà essere ripreparato e sterilizzato nuovamente inserendo un nuovo integratore VAPOR LINE.
6. La busta aperta può essere ripiegata nella sommità al fine di conservare in modo ottimale il prodotto.

96/1 13069216

9. UNLOADING

1. Turn off the main switch (10).
2. Screw the supplied tube on to the red cock (11).
3. Open the cock (10) by turning it in a counter-clockwise direction.
4. Totally empty the tank (1).
5. If there are residues on the bottom, wipe them off with the supplied sponge and rinse with distilled water.
6. Shut off the cock (11) by turning it in a clockwise direction.
7. Unscrew the supplied tube.
8. Pour distilled water into the tank until the lever reaches the edge of the air exhaust union.
9. The autoclave is now ready for another sterilizing cycle.

9.1 Troubleshooting: Solutions / Remedies

FAULTS	CAUSES	REMEDIES
The chamber fails to fill with water	- Main switch (1) faulty. - Switch (3) faulty. - Faulty solenoid valve and pump - Clogged filter pipe - No water in tank (1)	- Change the switch. - Replace or check the switch. - Check and/or replace - Check and/or replace. - Fill tank with water
The timer fails to function (8)	- Internal motor burnt out - Power fails to reach motor.	- Replace the timer - Check with a tester
Pressure gauge (9) stationary even during sterilizing cycle	- Pressure gauge (9) clogged or broken - No water in chamber	- Clean the tube or replace the pressure gauge - Repeat the cycle
Water remains in chamber	- The "Dry" warning light (5) remains on and fails to drain off the water	- Replace or check the draining solenoid valve
The machine does not heat (switch on, timer at half scale)	- Element is burned - Safety thermostat switches off	- Replace the heating element - Reset the thermostat *
The safety thermostat switches off frequently and the sterilization chamber does not heat	-Sterilization chamber too full of material to be sterilized -Sterilization chamber encrusted (limestone)	-Do not overload the chamber. Maximum load 3 kg. -Remove the limestone from the chamber with the liquid art. 5061 -Always use distilled water
Air and water return to chamber from tank during the sterilizing phase	- Defective water inlet solenoid valve -The heating element has burnt out - The heating element wire has detached.	- Clean and check to make sure there are no impurities under the seals - Replace the heating element - Re-connect the wire
The machine fails to pressurize during the cycle	- Safety thermostat faulty - Timer contact (8) faulty - Switch faulty 812)	- Replace thermostat * - Replace the timer - Change the switch

Pressure insufficient for the set cycle. Indicator lights (6) And (7) permanently on.	- Faulty bulb thermostat setting - Insufficient water in boiler - Leaking door seal	- Slightly charge thermostat in a clockwise direction - Comply with the instructions - Clean the seal and chamber
The pressure increases very slowly	- Chamber interior very dirty - Heating insufficient - Too much steam from vent	- Clean chamber as described in maintenance section. - Slackened heating element rods - Replace the complete vent union
Button (3) fails to return to OFF position	- Button blocked with light (4) permanently on	- Make sure that water enters and pull the button out to close (3)
Machine fails to come on when switch (10) is turned on	- Defective switch - No power supplied to appliance socket - Fuses inside machine burnt out	- Change switch and check wires - Check the socket and electricity main - Remove the casing and change the fuses with ones of an equal value. First make sure that there are no short circuits
Door fails to open with machine hot and pressure gauge below "0"	Vacuum in chamber	- Set timer (8) to N° 3, open door, set back to "0" position

*When switches off the safety thermostat, the technician who operates on the sterilizer must go back to why switches off and solve the problem.

10. MAINTENANCE



- Carry out maintenance with the machine switched off, having unplugged the machine from the mains and waited for the various parts to cool down.
- The declaration of conformity to current standards is invalidated if the maintenance jobs indicated hereafter are not carried out.
- If one or more heating elements is/are replaced, you must check the integrity of the machine's electrical safety.
- The declared useful lifecycle of the device is 8 years provided all the maintenance jobs indicated are carried out.
- Pursuant to the application of current standards, the user is requested to carry out all the maintenance jobs indicated. This guarantees that the device maintains the level of performance and safety declared by the manufacturer.
- The maintenance technician is obliged to inform the manufacturer of the jobs carried out.
- Exclusively spare parts supplied by the manufacturer may be used for maintenance purposes.

10.1 General maintenance

The machine needs to be serviced in a particular way. Users are therefore advised to comply with the below listed recommendations:

- Periodically check the condition of the electrical system with particular attention to the connection cable. **Contact our Technical Assistance Service or specialized personnel if faults are discovered.**
- Periodically clean the door, the seal and take particular care when cleaning the **internal part of the boiler**, removing any scaling with the damp sponge (supplied with the machine). Correct cleaning of these parts of the machine will ensure that the sterilizing cycle takes place in the right way.
- If the machine is not to be used for a long period of time, leave the door ajar and store it at a room temperature of $>8^{\circ}\text{C}$.
- Use a damp cloth to clean the casing of the machine. Never ever use inflammable liquids for any reason whatsoever.

10.2 Daily routine maintenance

Clear the door seal, door window and generally clean the outer and inner surfaces of the machine.

Clean the black silicone door seal, the outer and inner edges and the part where the door rests on the sterilizing chamber and on which the seal must tightly fit. Use the supplied sponge to do this. The soft part of the sponge can be used to clean the seal while the rough part can be used to clean the edge of the chamber. This cleaning operation must be carried out regularly to remove all impurities that could lead to loss of pressure inside the sterilizing chamber.

Check the used water level and drain off the actual water into the sewer if necessary. Then wash out the can under running water.

10.3 Weekly routine maintenance

Cleaning the sterilizing chamber / cleaning the trays and tray holders.

As specified in section 10.1 "General maintenance", all traces of deposits must be removed from the bottom of the chamber. Use the rough side of the supplied sponge for this operation, attempting to eliminate any scaling that may have formed.

Rinse everything with the same water used for the sterilizing process. The trays and tray-holders must also be cleaned in this way.

Drain the water and clean the tray.

10.4 Monthly routine maintenance


Lubricate the pins and locking mechanisms.

Check the movement of the hinge and door locking pin. Lubricate with Vaseline oil.

Make sure that the door is well regulated. If it is excessively slack, it must be adjusted by means of the supplied wrench. Turn the regulator at the rear of the door in a (A) direction. This will increase the pressure exercised by the seal.

Attempt to shut the door. If some difficulty is encountered, turn the regulator in a (B) direction.

Clean the entire autoclave cabinet with a slightly damp sponge, including the door casing.

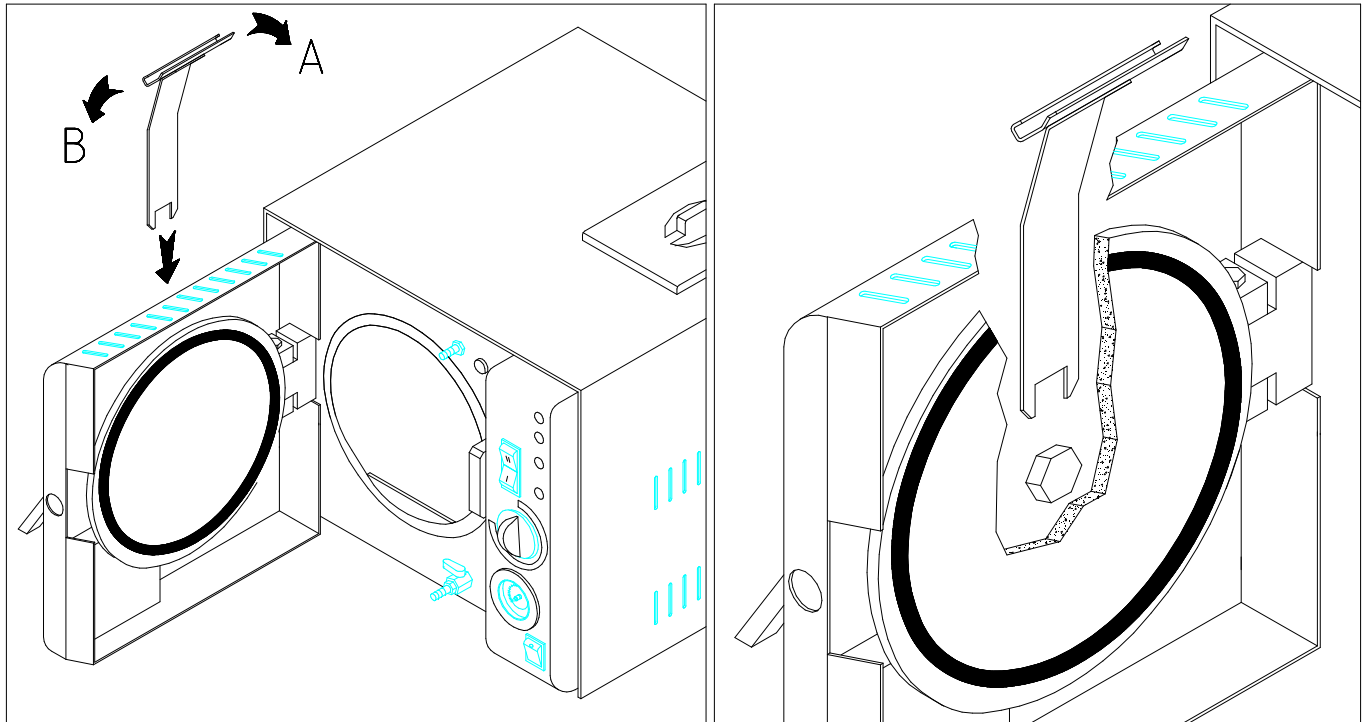

10.5 Periodic extraordinary maintenance

To allow the autoclave to operate in a regular way, the manufacturer advises users to carry out a functional test to ensure that the temperature and pressure parameters of the machine comply with the standards required for a correct sterilizing process.

These tests must be conducted by personnel authorized by the manufacturer, using calibrated and periodically certified instruments.


The autoclave can also be sent to the manufacturer for this test, after form P.26 has been filled out and accepted.

The autoclave is able to accept probes for the sterilizing tests.

It is advisable to have the appliance subjected to a Total Overhaul by After-sales Service staff at least once every 12 months.


The operation of the safety valve installed at the rear of the machine must also be checked at least once every 12 months. This is done by removing the protective casing and re-tightening the ring nut of the valve by hand. To prevent accidents, this operation should obviously be carried out when the machine is cold and off.

ELECTRICAL SYSTEM

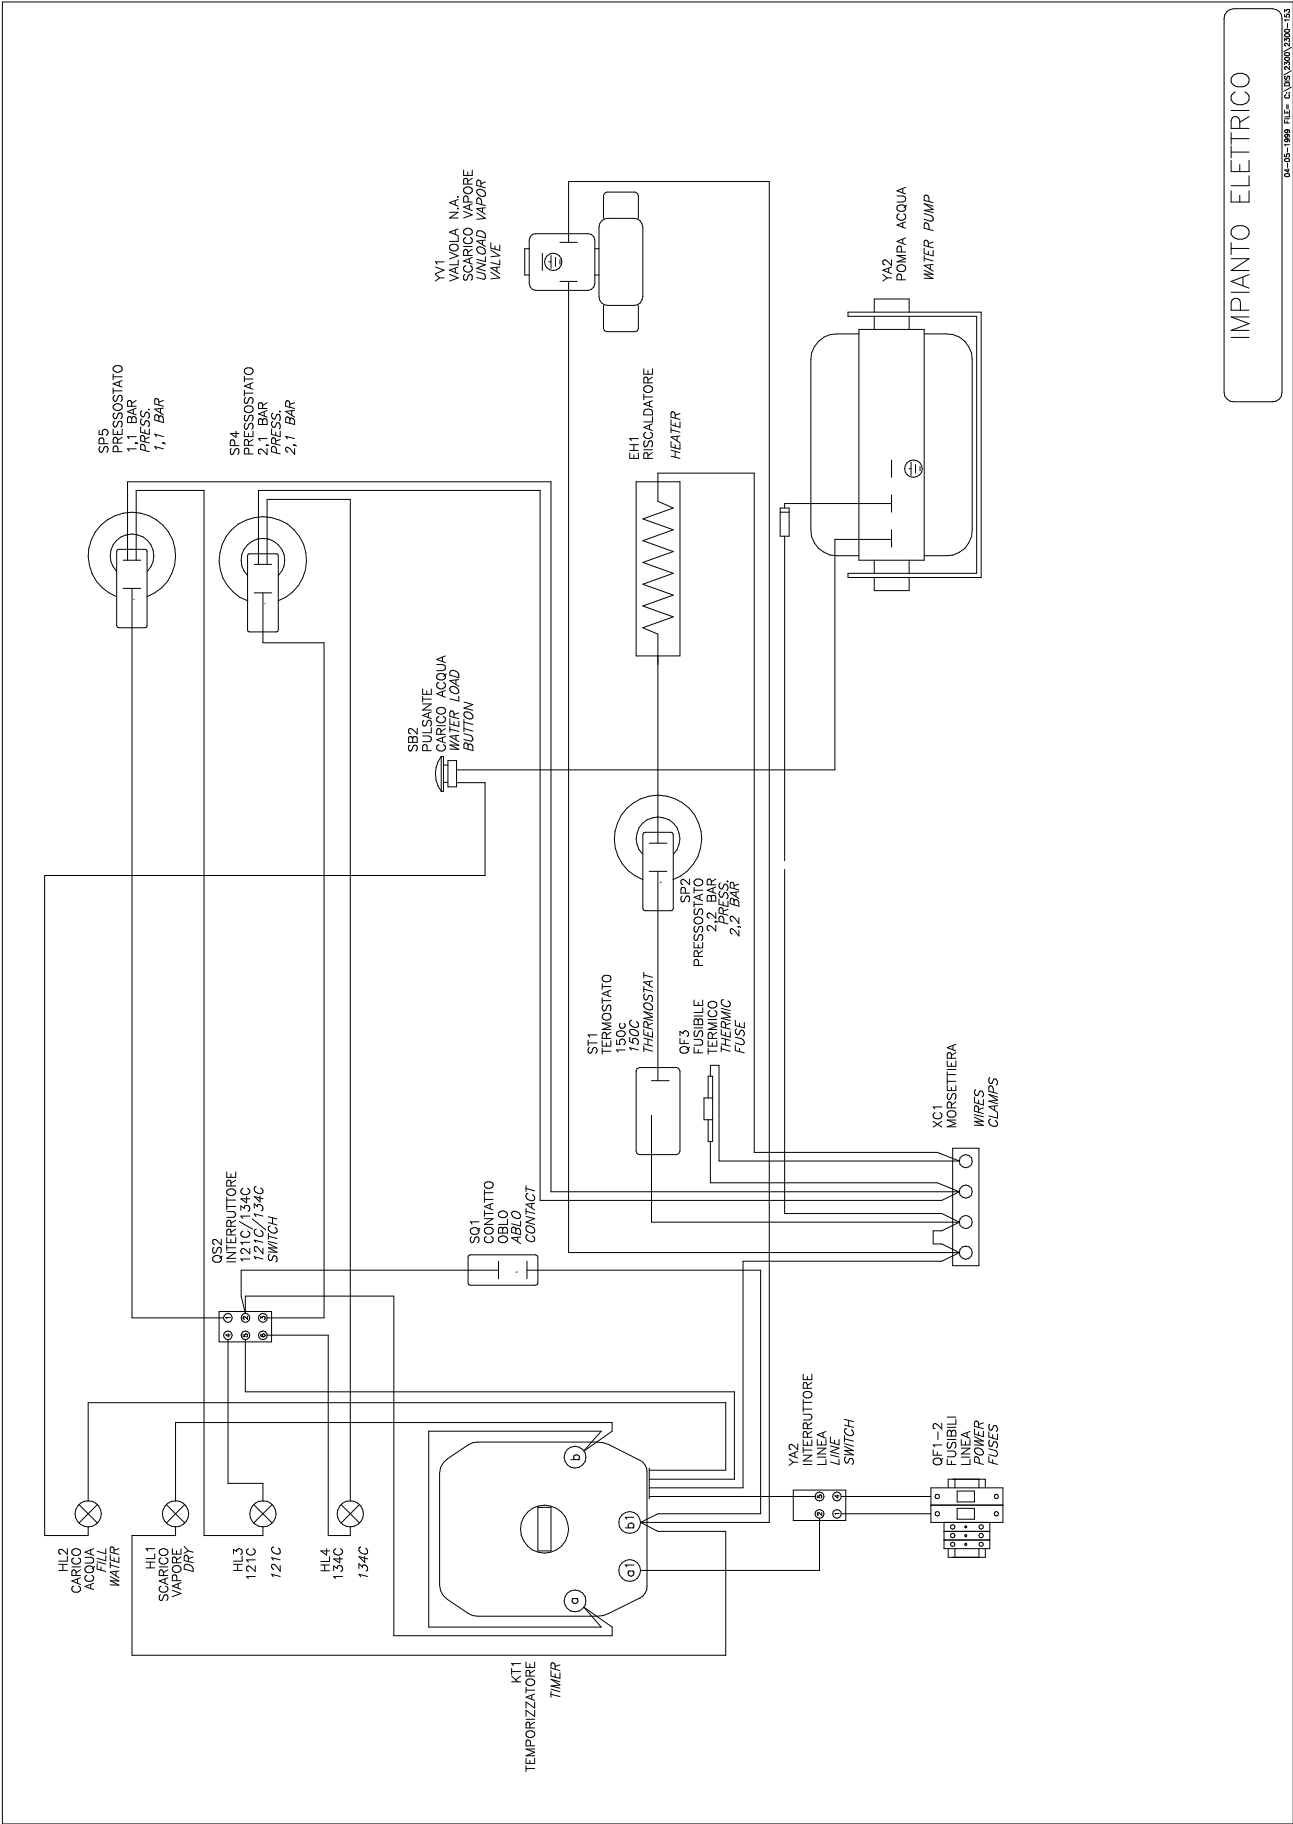

IMPIANTO ELETTRICO


04-05-1999 ELE- C:\05\3300\3300-15

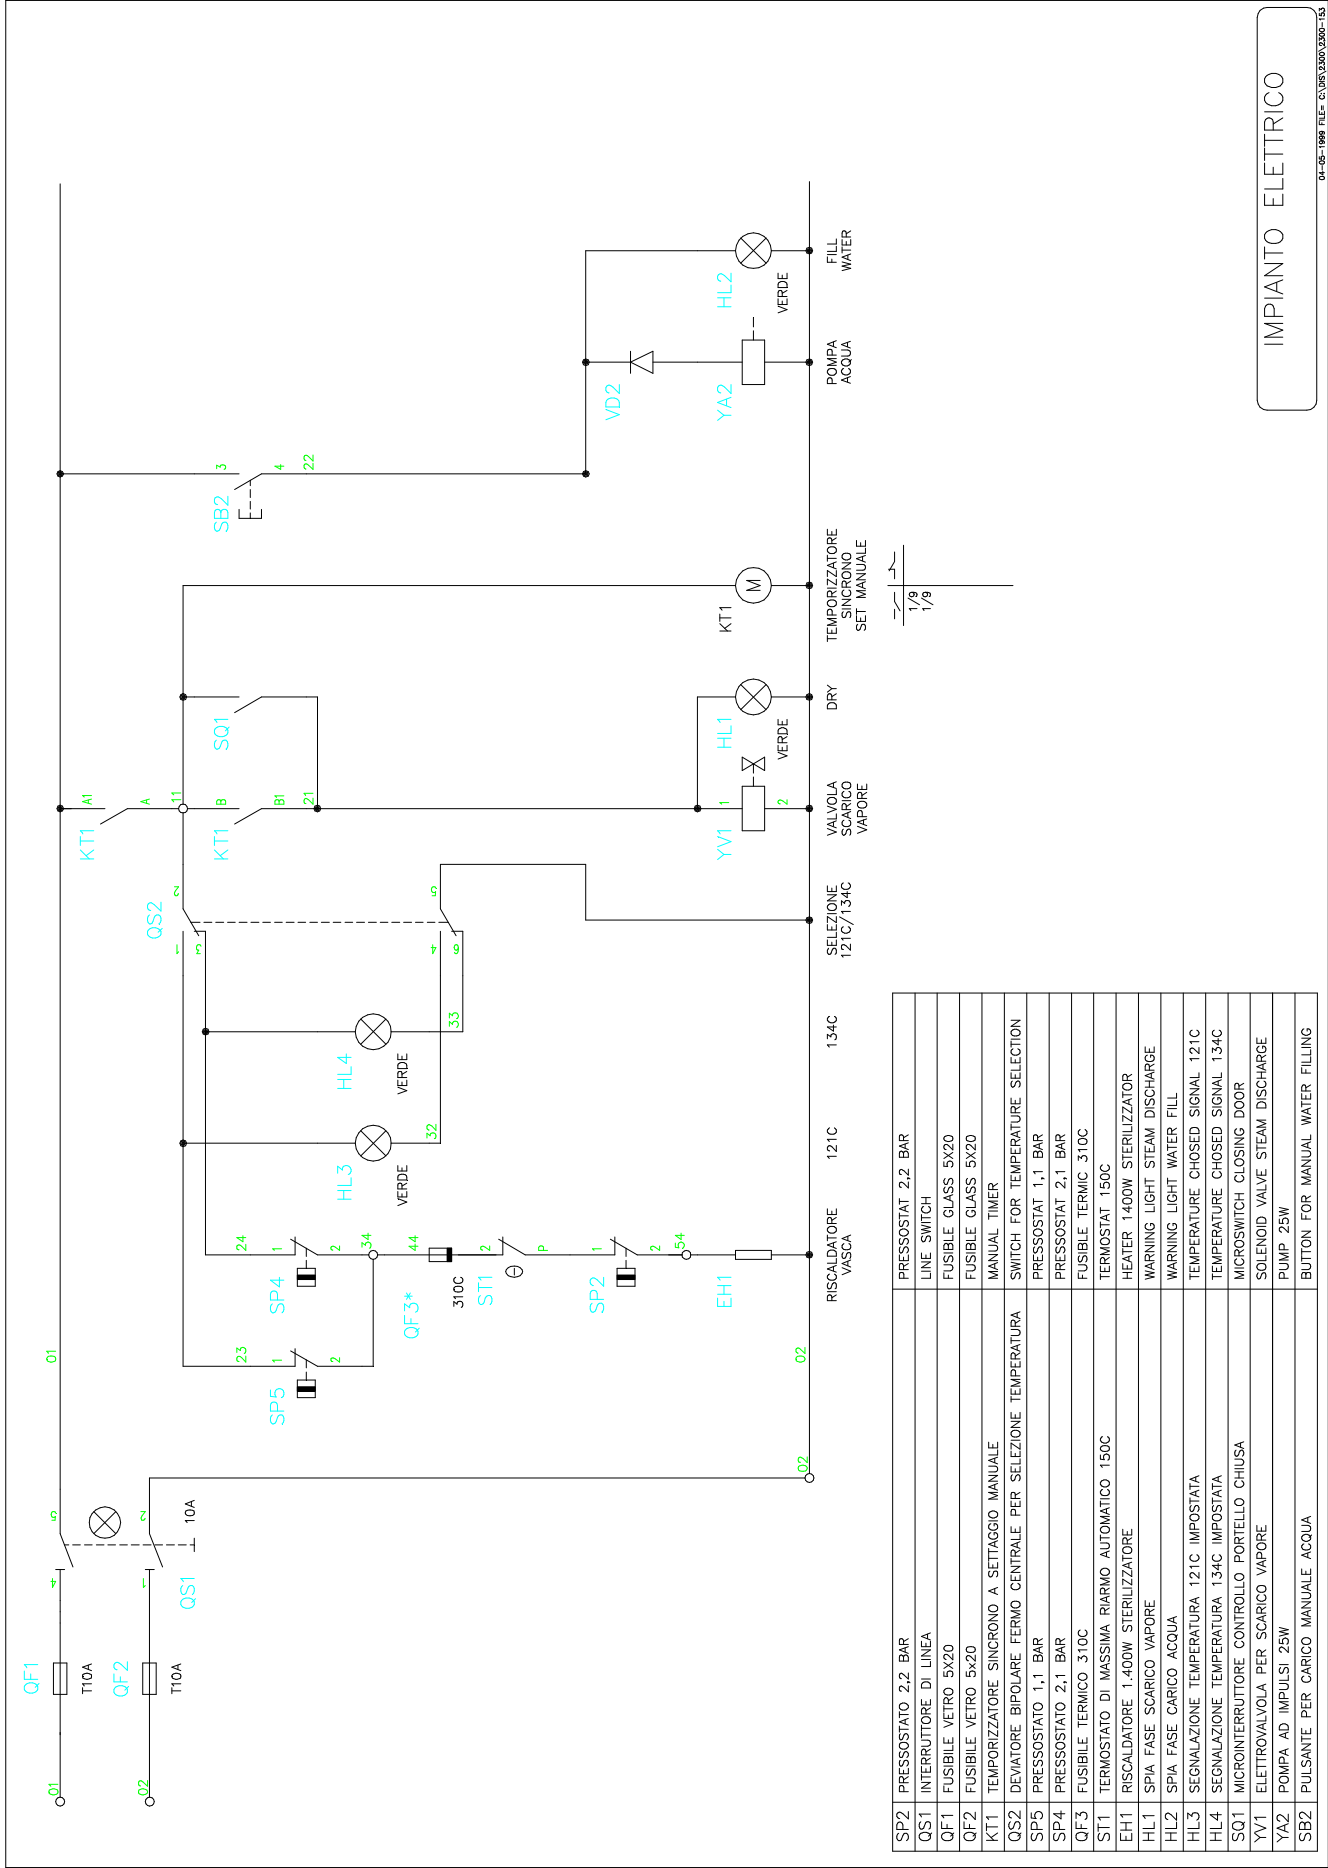

IMPIANTO ELETTRICO

04-05-1998 FILE C:\DS\3200\300-153

HYDRAULIC PLANT

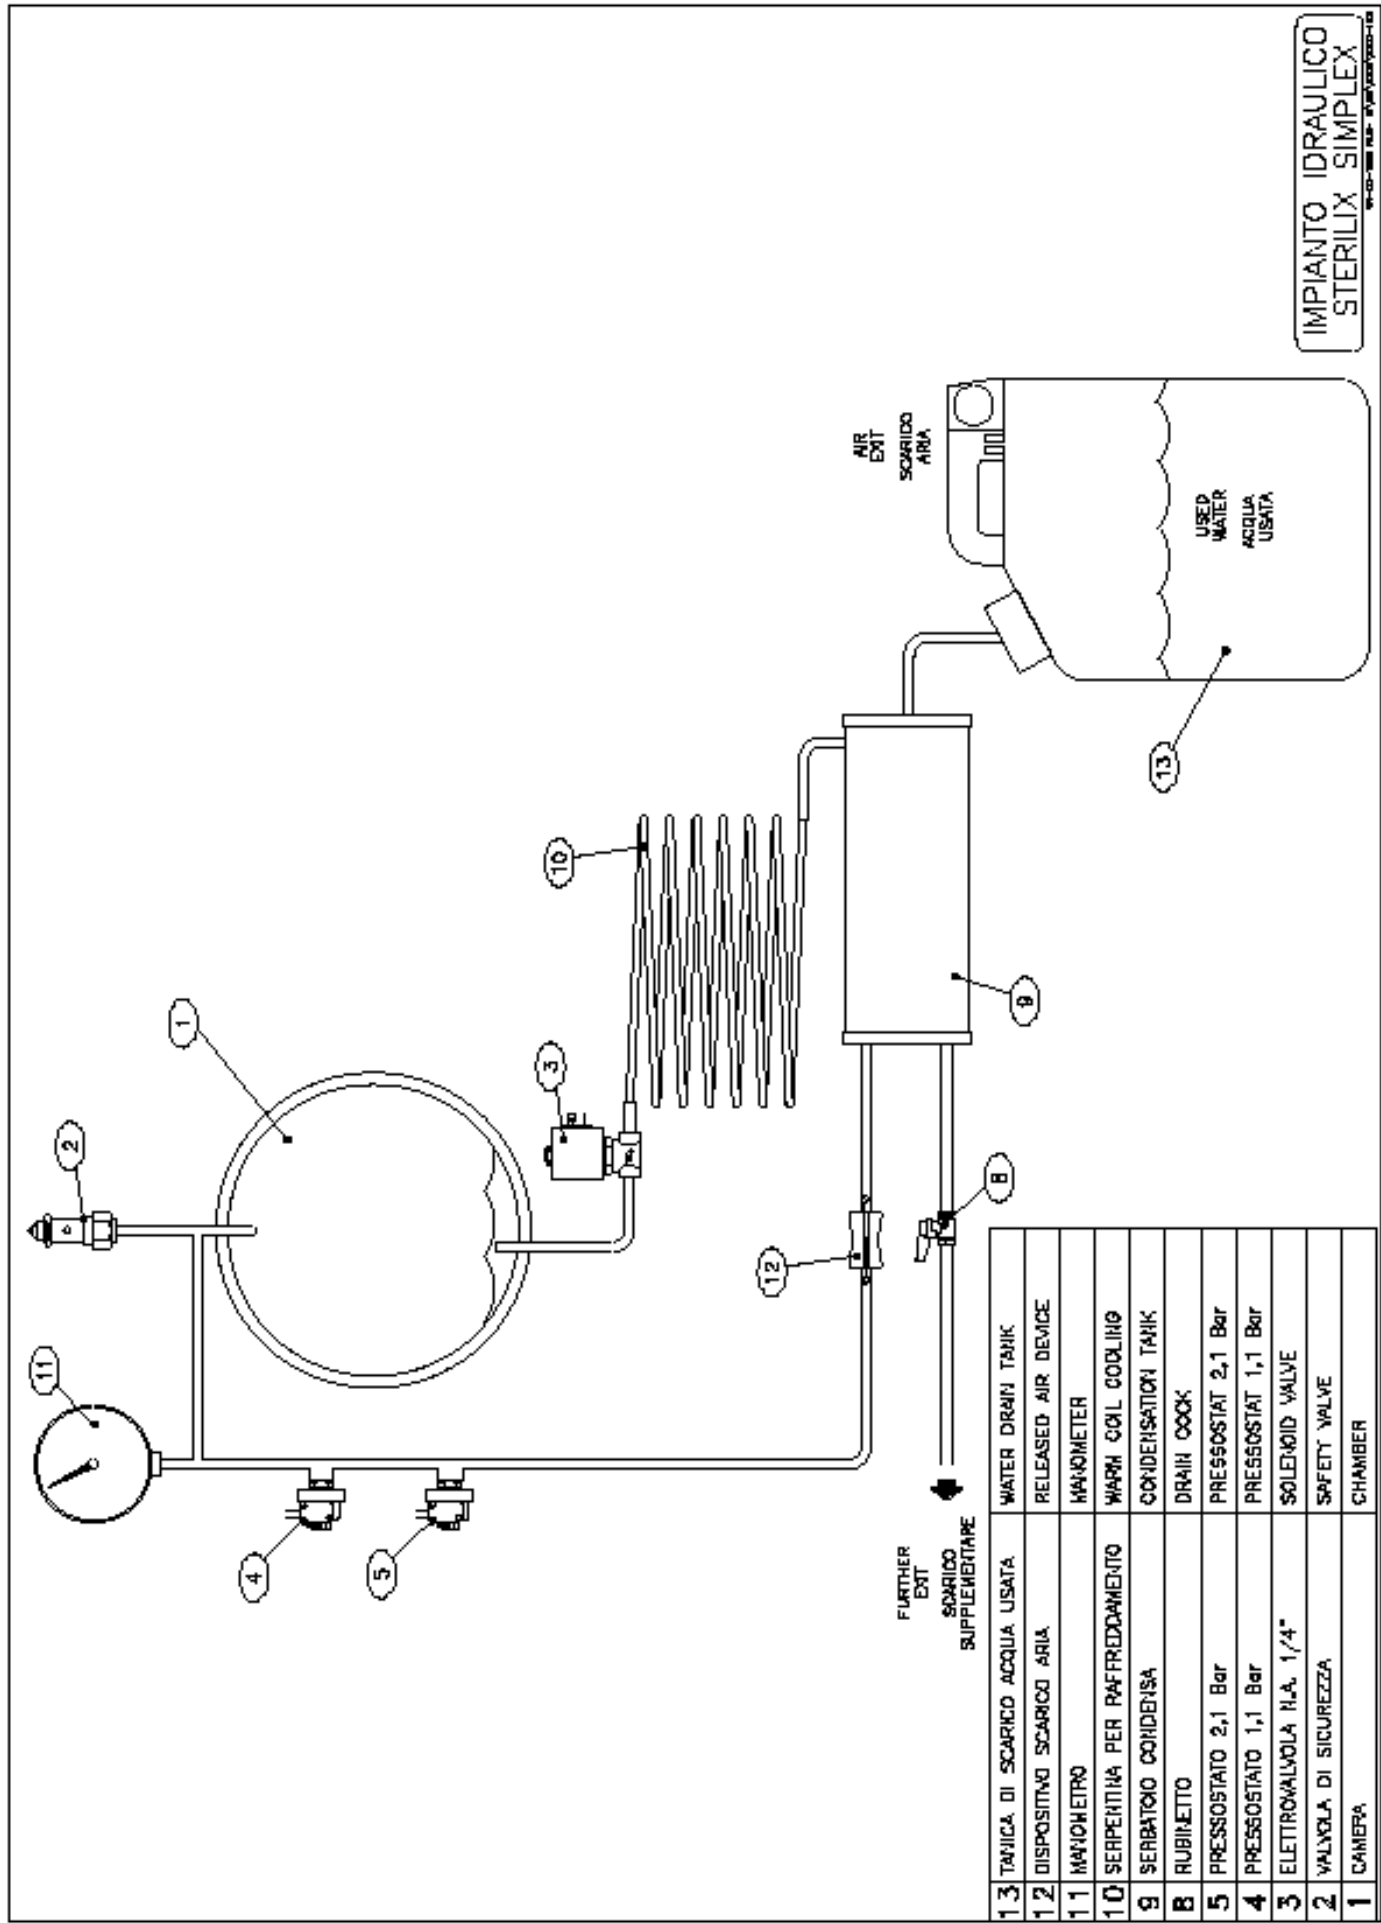



REVERBERI ARNALDO S.R.L

Via Don Luigi Sturzo n°6 42021 Barco di Bibbiano

Reggio Emilia – ITALY

Tel. 0039 (0) 522 875159 Fax 0039 (0) 522 875579

E-mail: reverberisrl@gmail.com

Numero REA: 180051 C.C.I.A.A di Reggio Emilia

Partita IVA, Codice Fiscale e reg. imprese di R.E. 01363800358

RETURN FORM FOR
REPAIR OF AUTOCLAVES**MODEL:****MATIKA****BABY****BABY AUTMATIC**To be filled by the technician
or an authorized person

Autoclave model.....

Serial Number

Purchase Invoice nbr.....

Dated

REASON FOR THE RETURN TO THE MANUFACTURER:☐ REPAIR FEE☐ EXTRAORDINARY MAINTENANCE WITH SECURITY TESTING
(According to regulation EN61010)☐ PERIODIC TESTING

(According to regulation EN13060)

☐ OTHER.....
.....**PROBLEM FOUND:** What message appears on the display?**INSTRUCTIONS FOR THE RETURN OF THE AUTOCLAVE:**

1. Before sending back the machine, please send us this form filled by fax to the number 0039 522 875579 and, please wait the authorization for the shipment that must be with your agent at your charge.
2. Unauthorized or not agreed shipments won't be accepted.
3. Before sending back the machine, provide to empty the tanks of used and clean water and, to remove the trays and trays-holder and keep them with you.
4. Send back the autoclave packed in the original package to purchase. Failing that, please provide adequate packaging preferably with pallet for handling with forklifts.
5. The intervention on the machine will follow our internal protocol provided by the internal quality system and, it includes a control and a possible upgrade for a perfect sterilization.
6. After taking vision of the machine, will be sent you a detailed quote. The quote can be accepted within 7 days from the date of issue, after this period of time, it will be considered tacitly rejected and the machine will be sent back to you NOT REPAIRED at your charge with payment on delivery to the carrier with cash on delivery (C.O.D against documents).
7. In case of Non-acceptance of the quote, we will proceed to invoicing of €120,00 as contribution analysis costs and managing of the appliance.
8. Requests for machines in loan use, will be carried out according to availability and, with a monthly charge for the use of € 60,00.
9. Standard repairs time : 3 weeks.
10. Urgent repairs time: 7 working days with a price increase of 50,00€ for the urgency.

The prices mentioned above are NET.** Please note: any unforeseen events that may occur during repair (not foreseen in the quotation) will be quantified at the time of invoicing.**☐ **ACCEPTANCE OF THE REPAIR AND WAITING FOR THE QUOTE**☐ **WAIVING REPAIR**

Date.....Stamp and Signature.....

It is obligatory for the installer to fill out all parts of this form and to declare that he has complied with all the conditions ensuring that the appliance is correctly installed in compliance with sect. 5.1 of the instruction manual.

The installer also declares that he has duly trained the user to operate the machine, with the help of the instruction manual.

The technician declares that he has attached the printer ticket to this form along with the warranty form, duly filled out in all parts.

The above mentioned documents must be immediately forwarded to the manufacturer.

Notes and/or considerations

.....

.....

.....

Installer's signature and date

.....

WARRANTY

This document certifies that the appliance has been correctly manufactured.

Carefully read the instruction manual before forwarding complaints.

The appliance will be repaired if it operates in a faulty way during the warranty period owing to manufacturing defects, the manufacturer's judgment over such matters being final.

The appliance is covered by guarantee for a period of 5 (five) years from the date of purchase. Our sales form (DDT) indicating the serial number of the appliance shall bear witness in the event of disputes.

The electrical, electronic parts and nuts and bolts are guaranteed for a period of 12 (twelve) months.

The warranty covers the sole replacement or repair of those parts recognized as possessing manufacturing defects, with the exclusion of expenses for:

- Transfers
- Call rights
- Mileage reimbursement
- Shipment

Replaced parts shall be returned free port. The ordering party shall be charged for any part that is not returned.

All appliances returned for repairs shall only be sent to us free port after authorization and compilation of form P.26 (also in Photostat copy form).

The appliances must be sent to us adequately packed in their original wrapping clearly indicating the sender, his address and the claimed defect.

All appliances must be set free port.

THE WARRANTY SHALL BECOME VOID:

1. If the appliance has been repaired, modified or tampered with by the purchaser or by unauthorized third parties.
2. If the purchaser fails to contact the seller or authorized technical center.
3. If the customer and/or reseller delays or suspends payments.
4. If the appliance has been damaged by exposure to fire, spilt liquids, natural disasters, has been dropped or damaged by causes that are not ascribable to manufacturing defects.
5. When the warranty form has not been duly filled out, signed and returned within the established time.
6. If the customer fails to use the appliance correctly.
7. If the appliance is not serviced correctly or is used improperly.

AUTOCLAVES TRACEABILITY



REVERBERI ARNALDO S.r.l.
 Via Don L. Sturzo, 6 – 42021 Barco di Bibbiano (RE) ITALY
 Codice Fiscale e Partita IVA: IT 01363800358
 Numero REA: 180051 C.C.I.A.A. di Reggio Emilia
 Tel. 0039 (0) 522 875159 Fax 0039 (0) 522 875579
 e-mail:reverberisrl@gmail.com

Subject: obligation traceability of the autoclaves

Barco di Bibbiano,

In compliance with the requirements of directive 93/42/EEC medical devices, replaced by directive 2007/47/EC, leg. 25.01.2010 n ° 37, annex I, company Reverberi Arnaldo Srl is obliged to be able to trace its products through to the end user (physicians, dental studios, medical laboratories).

Thus, the person in charge of the warehouse and/or the dealer shall obligatorily keep the transport documents bearing the serial numbers of the autoclaves in their files for at least 10 (ten) years. Alternatively, they shall keep a list of their end user customers to whom the serial numbers of the consigned autoclaves are associated.

It must also be possible to trace the autoclaves (the serial number of the machine must correspond to the end user customer) even when their final destination changes (autoclaves that change hands from one customer to another).

Should Reverberi Arnaldo S.r.l. be prevented from tracing the product (to have it returned to the company, for example) owing to failure of the person in charge of the warehouse or the dealer to fulfil this requirement, it shall be obliged to inform the competent authorities and the notified body of this non-performance and reserves the right to claim reimbursement of the damages deriving from failure to trace the product from the person in charge of the warehouse and/or from the dealer in question.



The manufacturer provided to operators and technicians, technical training at the headquarters of Bibbiano (RE). For information about course dates please contact us to our telephone number 0039 (0) 522 875159.

.....
Reverberi Arnaldo S.r.l.

.....
Warehouse / Dealer

Please resend back to the manufacturer signed and stamped for acceptance. Thanks.

WARRANTY CERTIFICATE

APPLIANCE:

The undersigned reseller certifies that the warranty has been examined and certifies that the appliance has been consigned and installed in compliance with the instructions given

by the manufacturer on:.....

By Mr.

Address

ZIP Code City

1 – FOR THE PURCHASER

.....
TECHNICAL INSTALLER SIGNATURE AND STAMP*



Via Don Luigi Sturzo, 6
42021 BARCO DI BIBIBANO (Reggio Emilia) ITALY

..... ✂ ✂

THIS PART OF THE CERTIFICATE MUST BE SENT BACK BY REGISTERED LETTER WITHIN 8 DAYS FROM THE DATE OF PURCHASE

WARRANTY CERTIFICATE

TO BE RETURNED SIGNED AND STAMPED

APPLIANCE:

The undersigned reseller certifies that the warranty has been examined and certifies that the appliance has been consigned and installed in compliance with the instructions given

by the manufacturer on:.....

By Mr.

Address

ZIP Code City Buyer signature.....

2 –FOR THE MANUFACTURER

.....
RESELLER'S SIGNATURE AND STAMP



Via Don Luigi Sturzo, 6
42021 BARCO DI BIBBIANO (Reggio Emilia) ITALY

* The technical installer must be authorized by the building factory.



SETTORE DISPOSITIVI MEDICI

Aggiornato Rev-09 del 28-10-2015

Cod.3417

PEZZI DI RICAMBIO SPARE PARTS Mod. MECCANICA



AVVERTENZA: Per richiedere i pezzi di ricambio occorre sempre comunicare il N° di matricola della macchina, in quanto potrebbero esserci alcuni componenti in alternativa.

NOTICE: To order spare parts, please let us know the number of series of your autoclaves, to avoid mistakes.

9	RACCORDO PER CALDAIA 1/8"	FITTING	2406
8	GHIERA 3/8" ZINCATA	METAL RING	0905
7	ROND. 3/8" GAS 17x22x1.5 RAME	WASHER	0097
6	RIVESTIMENTO AUTOCLAVE	COVER CLOTH	4202
5	ATTACCO ESTERNO SCARICO	SIDE DESCHARGE	3589
4	FASCIA	BAND	3977
3	VITE DI SCARICO	DESCHARGE SCREW	3192
2	RESISTENZA 1400W 270X300	ELEMENT 1400W	4395
1	CUVE BRILLANTATA MATIKA	BOILER AUTOCLAVE	2976
Nr.	DESCRIZIONE	NAME	CODE

COD. 2977 PRIMA FASE

ESP. MECCANICA-01
M9010/23/06

1


2

3

3	TERMOSTATO MANUALE 230°	MANUAL THERMOSTAT 230°	3461
2	TERMOSTATO AUTOMATICO 170°	AUTOMATIC THERMOSTAT 170°	0396
1	SUPPORTO TERMOSTATO	THERMOSTAT SUPPORT	4394
Nr.	DESCRIZIONE	NAME	CODE

COD. 3009 GRUPPO TERMOSTATO


ESP. MECCANICA-02
M9010/23

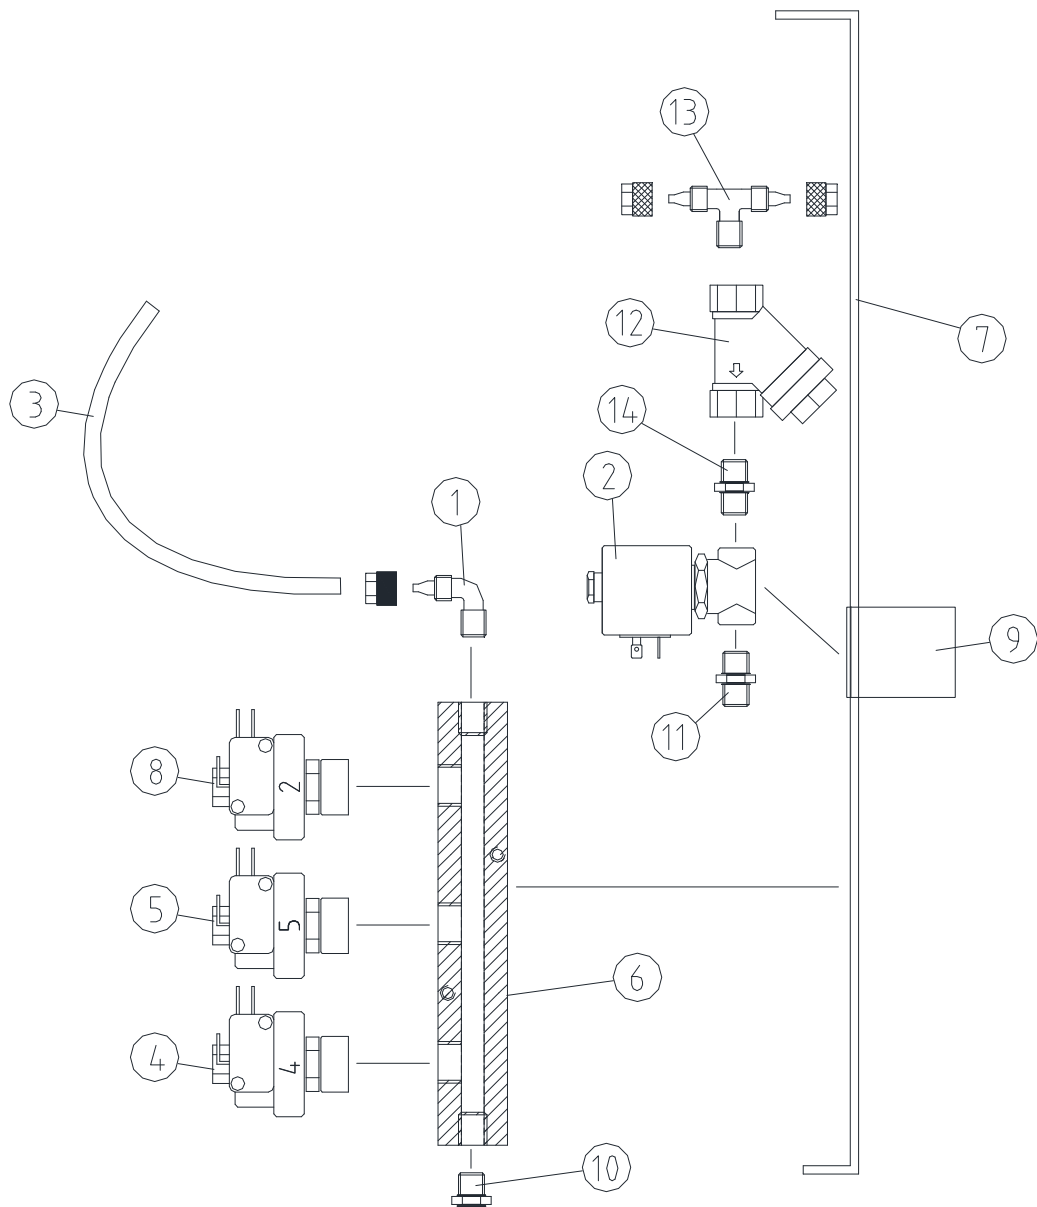


14	NIPPLE 1/4"	CONNECTION 1/4"	2945
13	RACCORDO T MASCHIO 1/4"	T CONNECTION 1/4"	3012
12	FILTRO A Y 1/4"	Y FILTER 1/4"	3136
11	NIPPLE 1/4"	CONNECTION 1/4"	2400
10	TAPPO 1/8"	CAP 1/8"	3134
9	SUPPORTO E.V.N.A.	SOLENOID SUPPORT	3060
8	PRESSOSTATO 1-2.5 TARATO 2,5	PRESSOSTAT	1451
7	DISTANZIALE DI SUPPORTO VERNICIATO	SPACER	3716
6	COLLETTORE PRESSOSTATI	PRESSOSTAT COLLECTION	3023
5	PRESSOSTATO 1-2.5 TARATO 2.1	PRESSOSTAT	2853
4	PRESSOSTATO 0.5-1.2 TARATO 1.3	PRESSOSTAT	2852
3	TUBO TEFLON	TEFLON HOSE	2694
2	ELETTROVALVOLA N.A. 1/4"	SOLENOID VALVE	1357
1	RACC. L MASCHIO CONICO 6/4 1/8"	FITTING	3024
Nr.	DESCRIZIONE	NAME	CODE

COD. 3269 GRUPPO PRESSOSTATI

ESP. MECCANICA-03
M9010/23/06

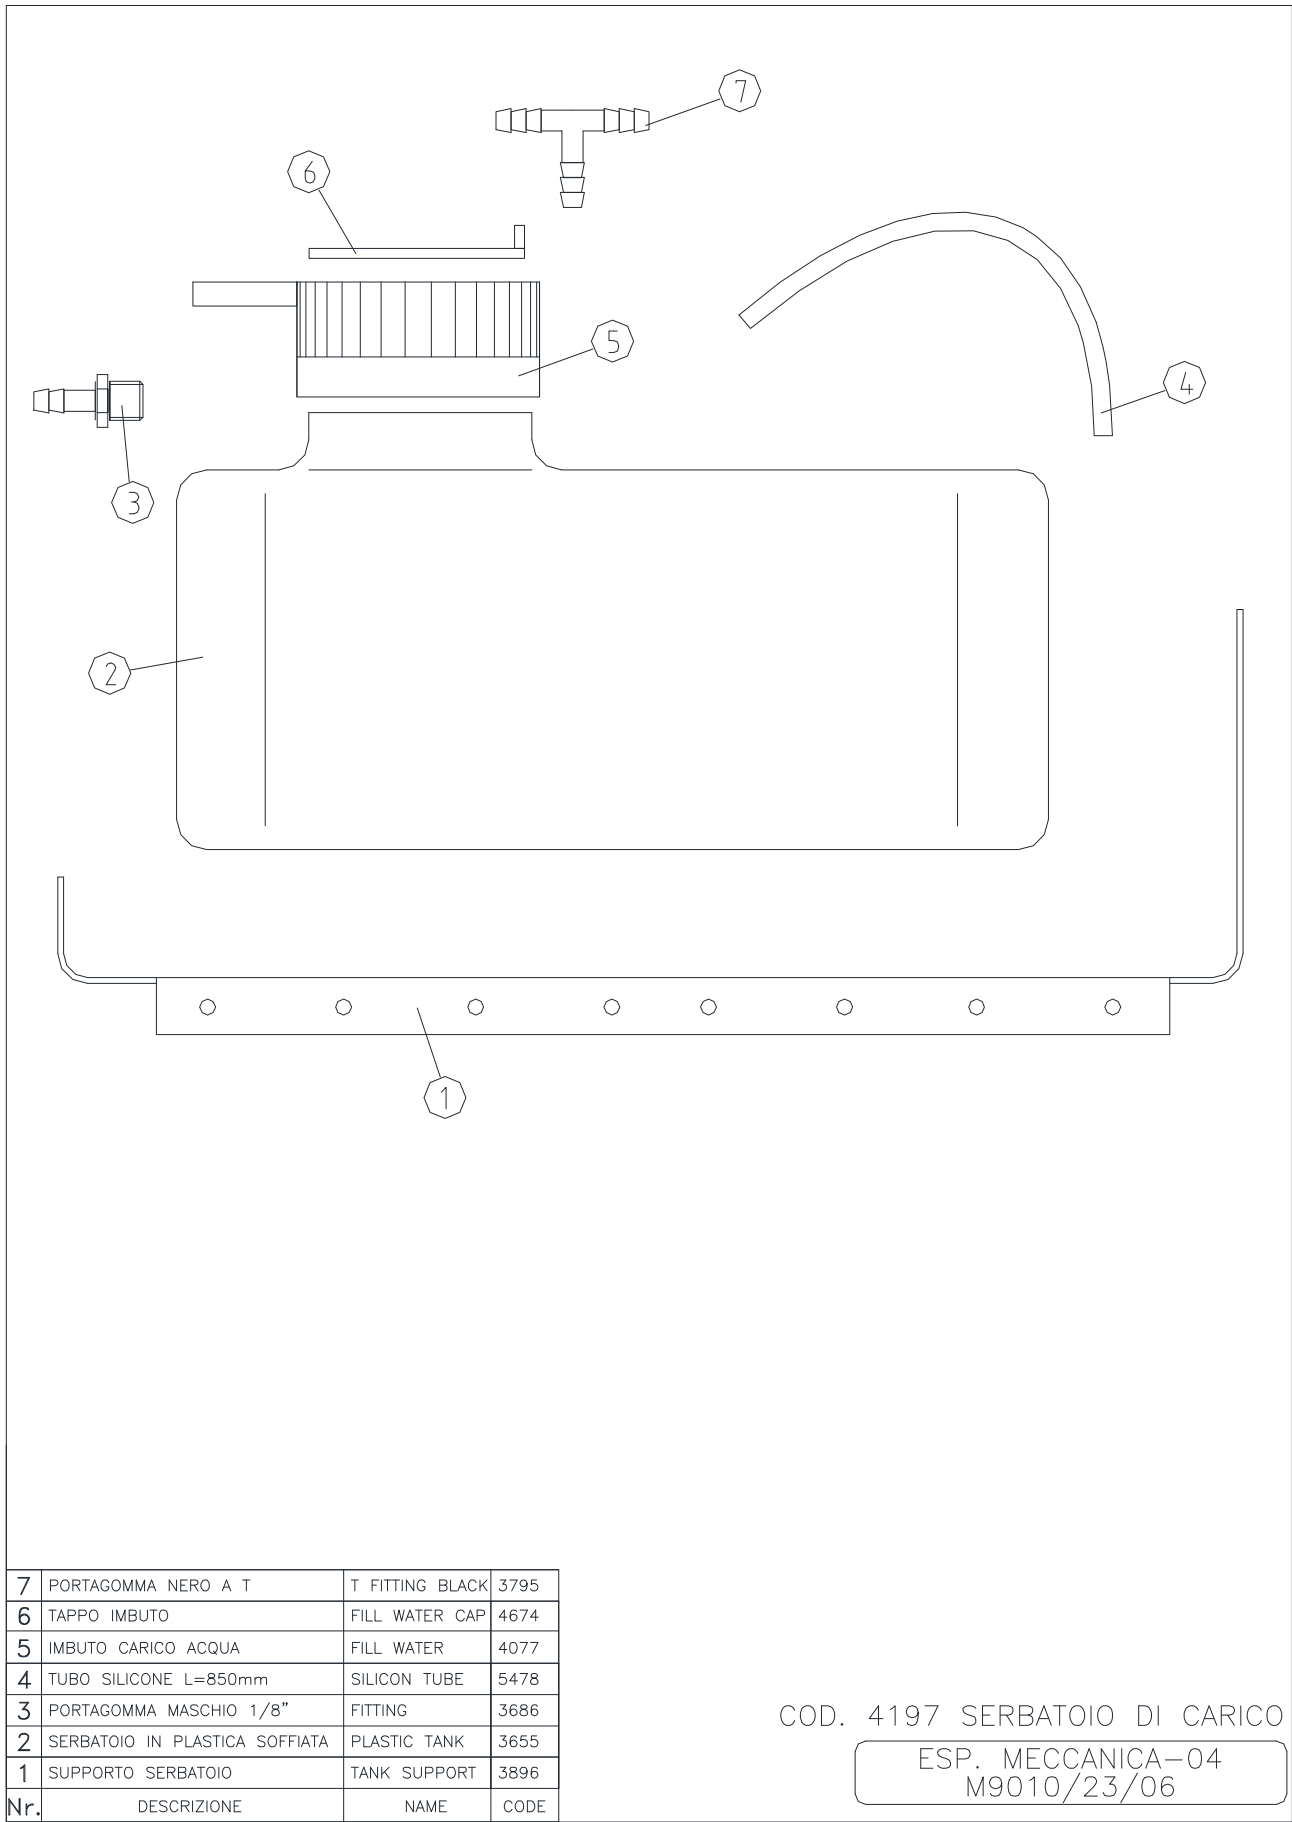

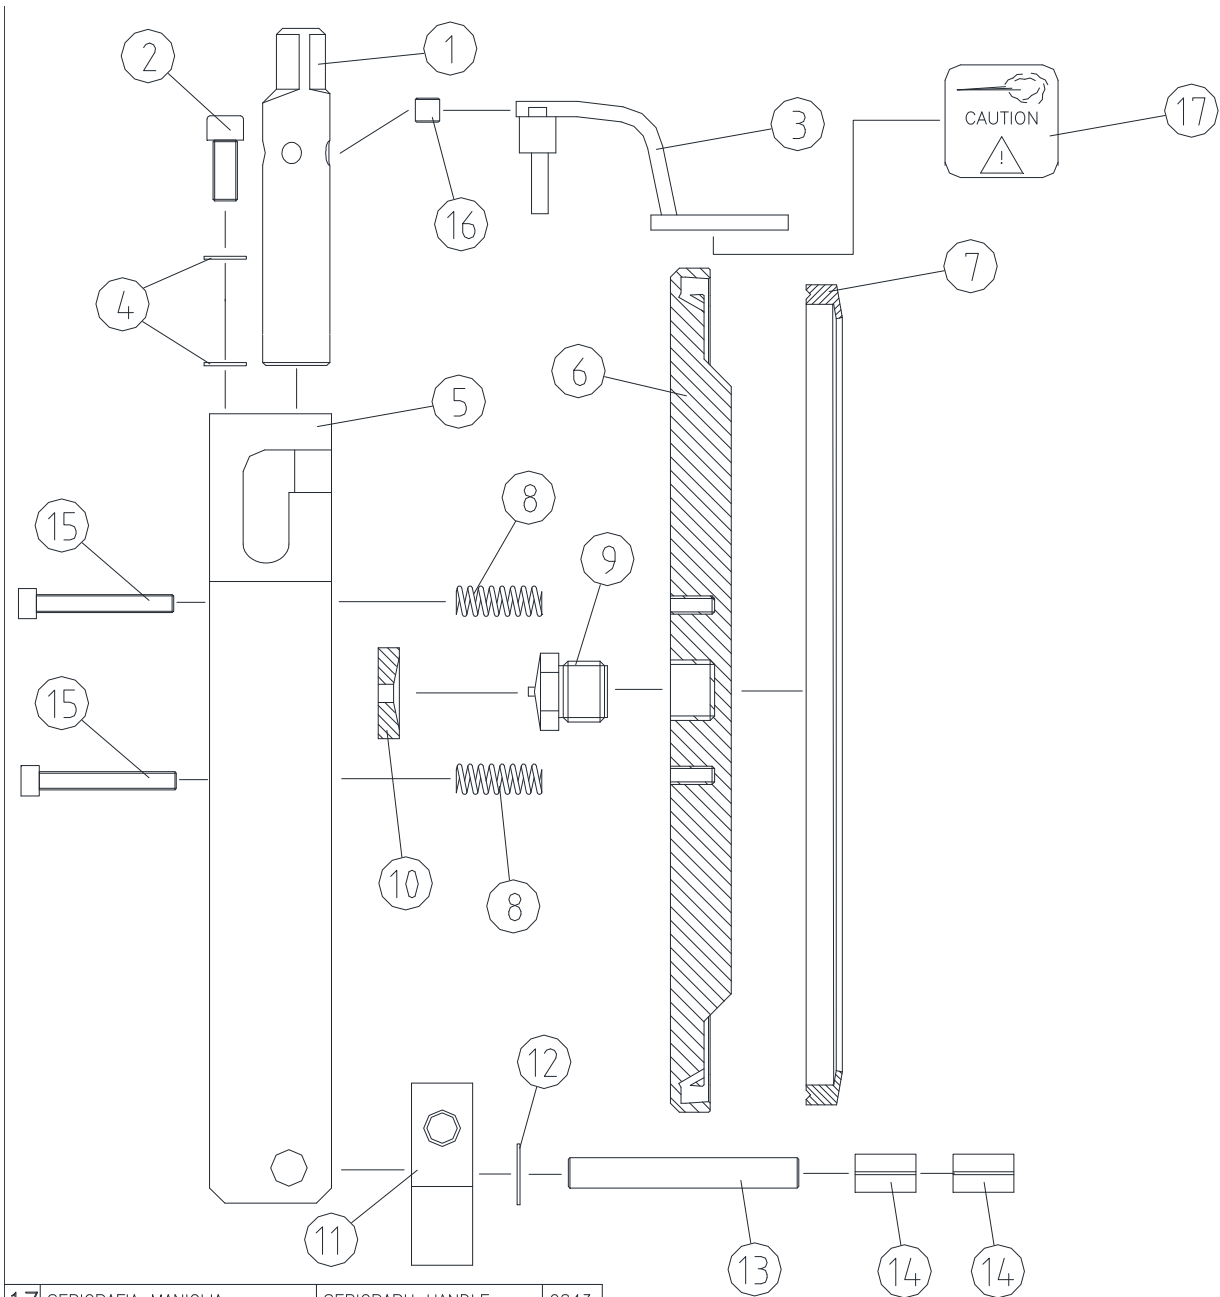



17	SERIGRAFIA MANIGLIA	SERIGRAPH HANDLE	2843
16	GRANO M8X8 INOX	SCREW	1670
15	VITE TCEI M6X45 ZINCATA	SCREW	1016
14	BOCCOLA TEFLONATA	BUSH	2937
13	SPINA CALIBRATA Ø10X80	CALIBRATE SPIN	2936
12	RONDELLA OTTONE TRANCIATA	BRASS WASHER	3015
11	SUPPORTO BRACCIO NICHELATO	SUPPORT	0623
10	RONDELLA DI REGISTRO	WASHER	1407
9	REGOLATORE PORTELLO	REGISTER SCREW	3099
8	MOLLA TENSIONE PORTELLO	SPRING	1406
7	GUARNIZIONE SILICONE NERO	BLACK SILICON GASKET	2889
6	PORTELLO	DOOR	1394
5	BRACCIO STERILIX OSSIDATO	ARM	1663
4	RONDELLA Ø8.5X13.8X1 RAME	COPPER VASHER	3015
3	MANIGLIA VERNICIATA	HANDLE	3071
2	VITE TCEI M8X20 ZINCATA	SCREW	3017
1	PERNO CHIUSURA Ø22	CLOOSING PIN	1667
Nr.	DESCRIZIONE	NAME	CODE


GRUPPO CHIUSURA
ESP. MECCANICA-05
M9010/23/06




ESP. MECCANICA-06
M9010/23/06

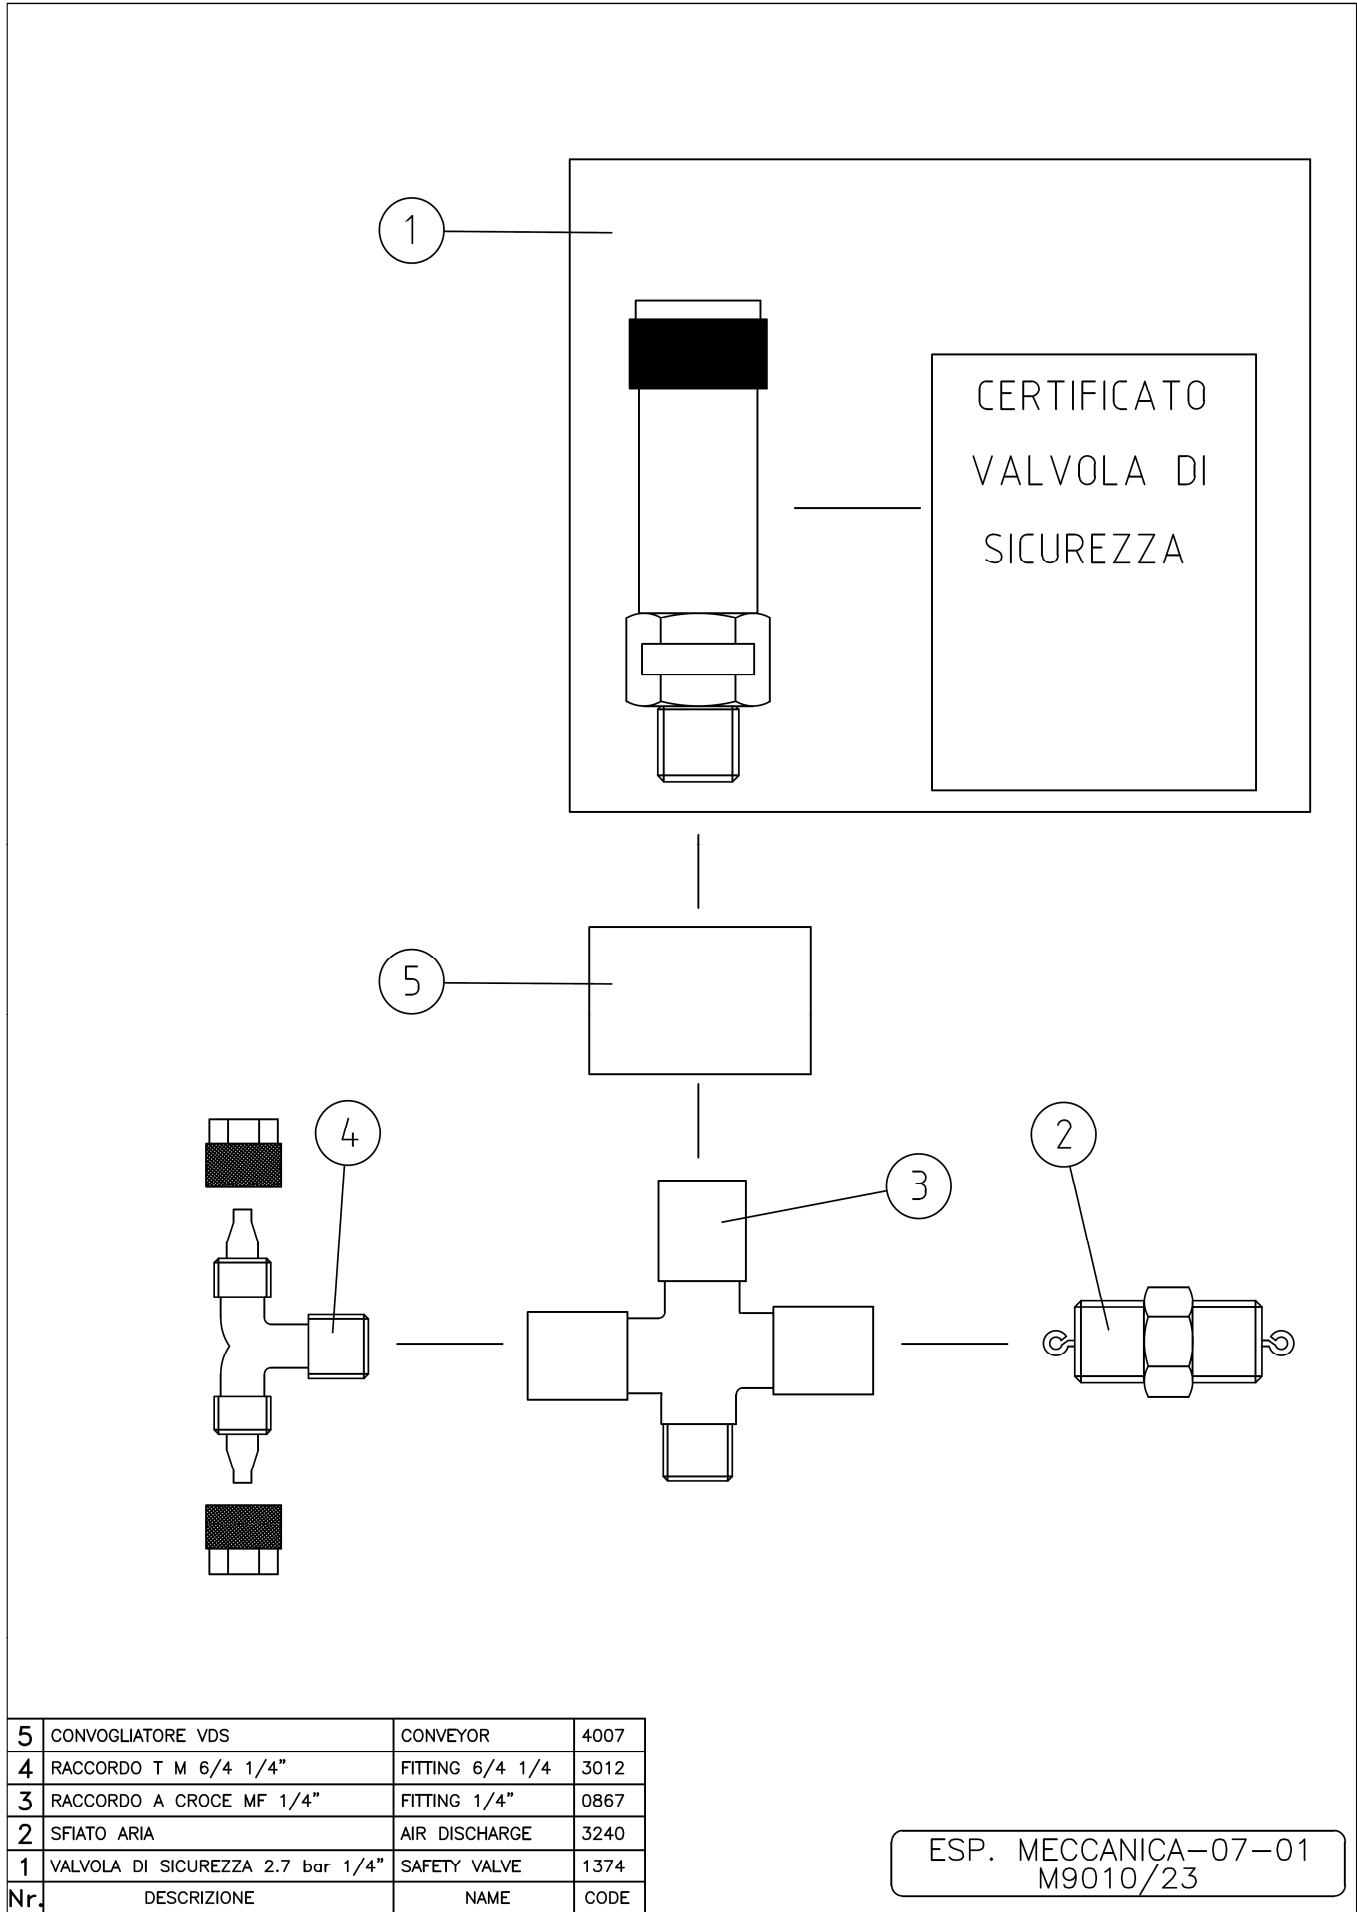

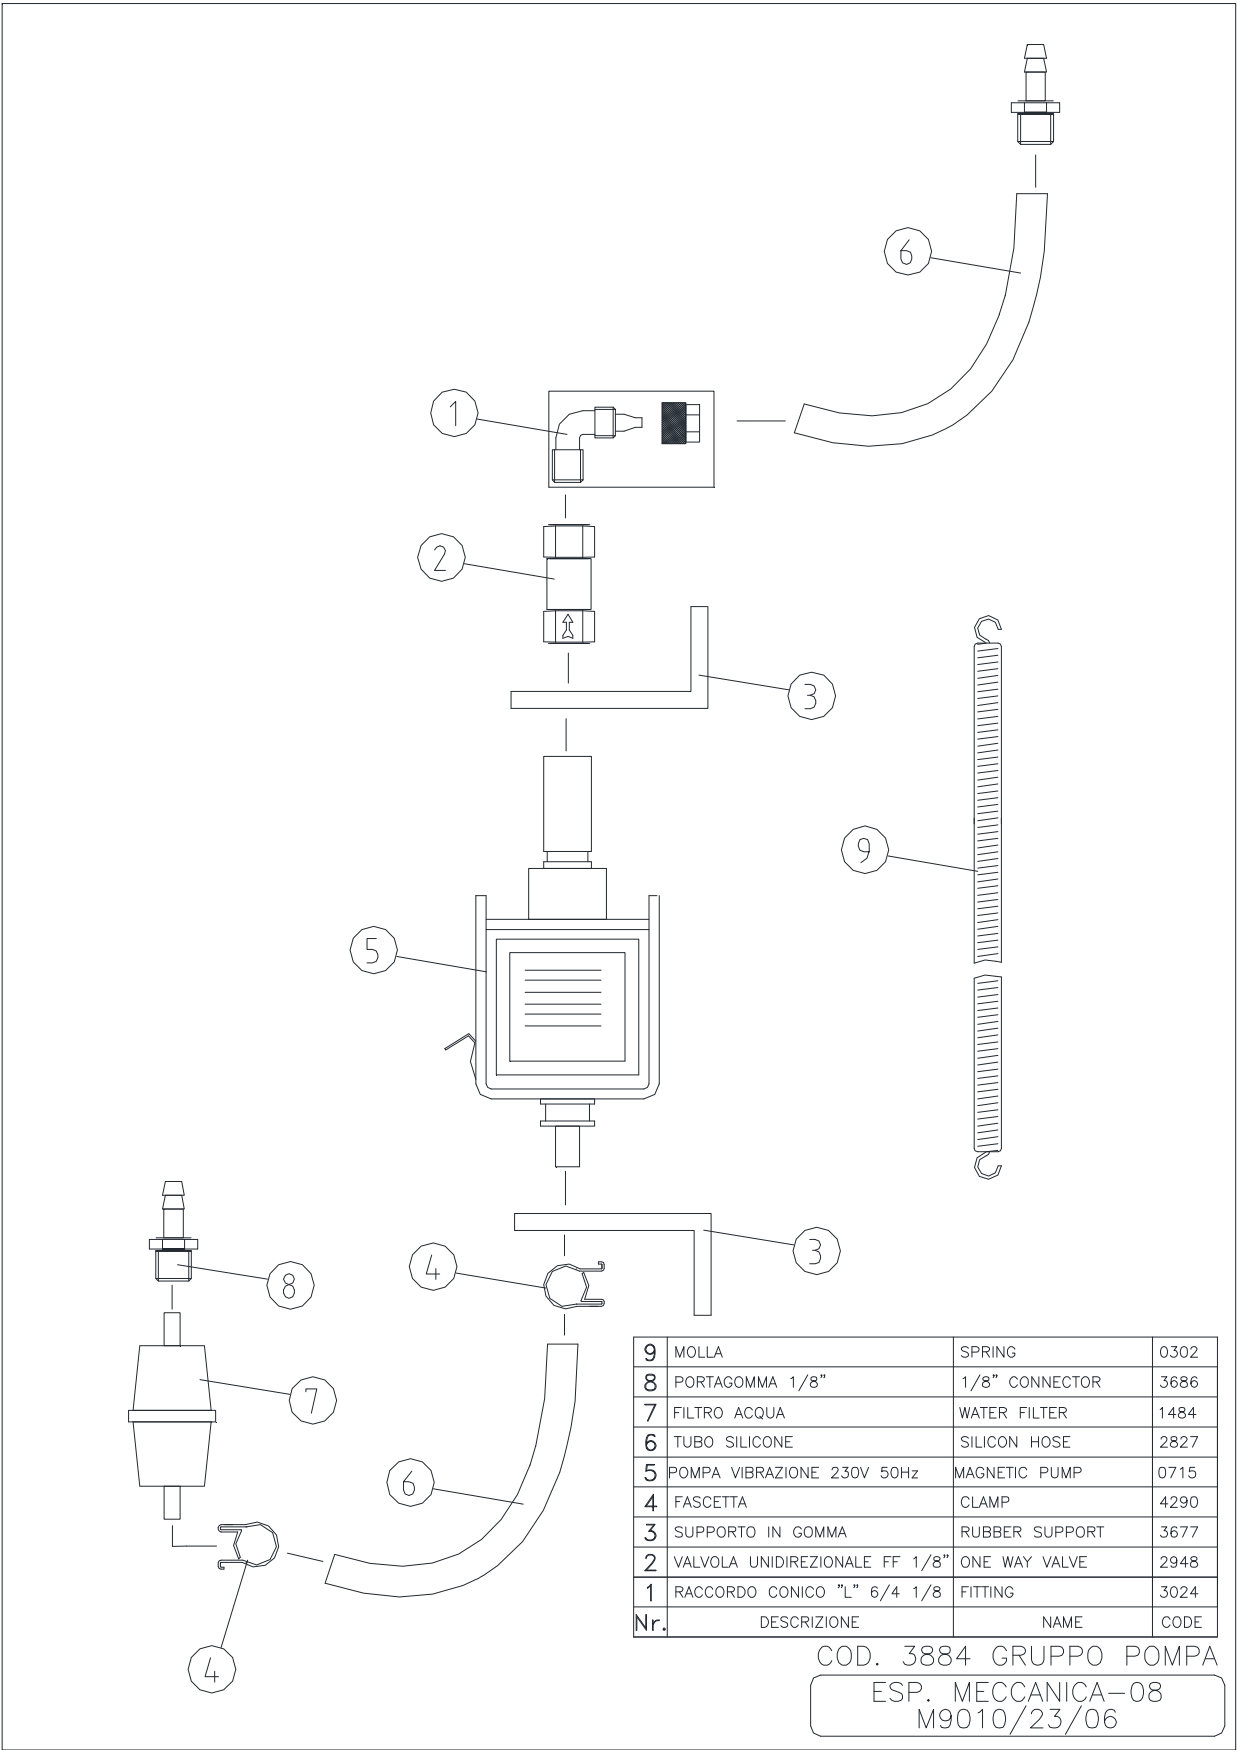

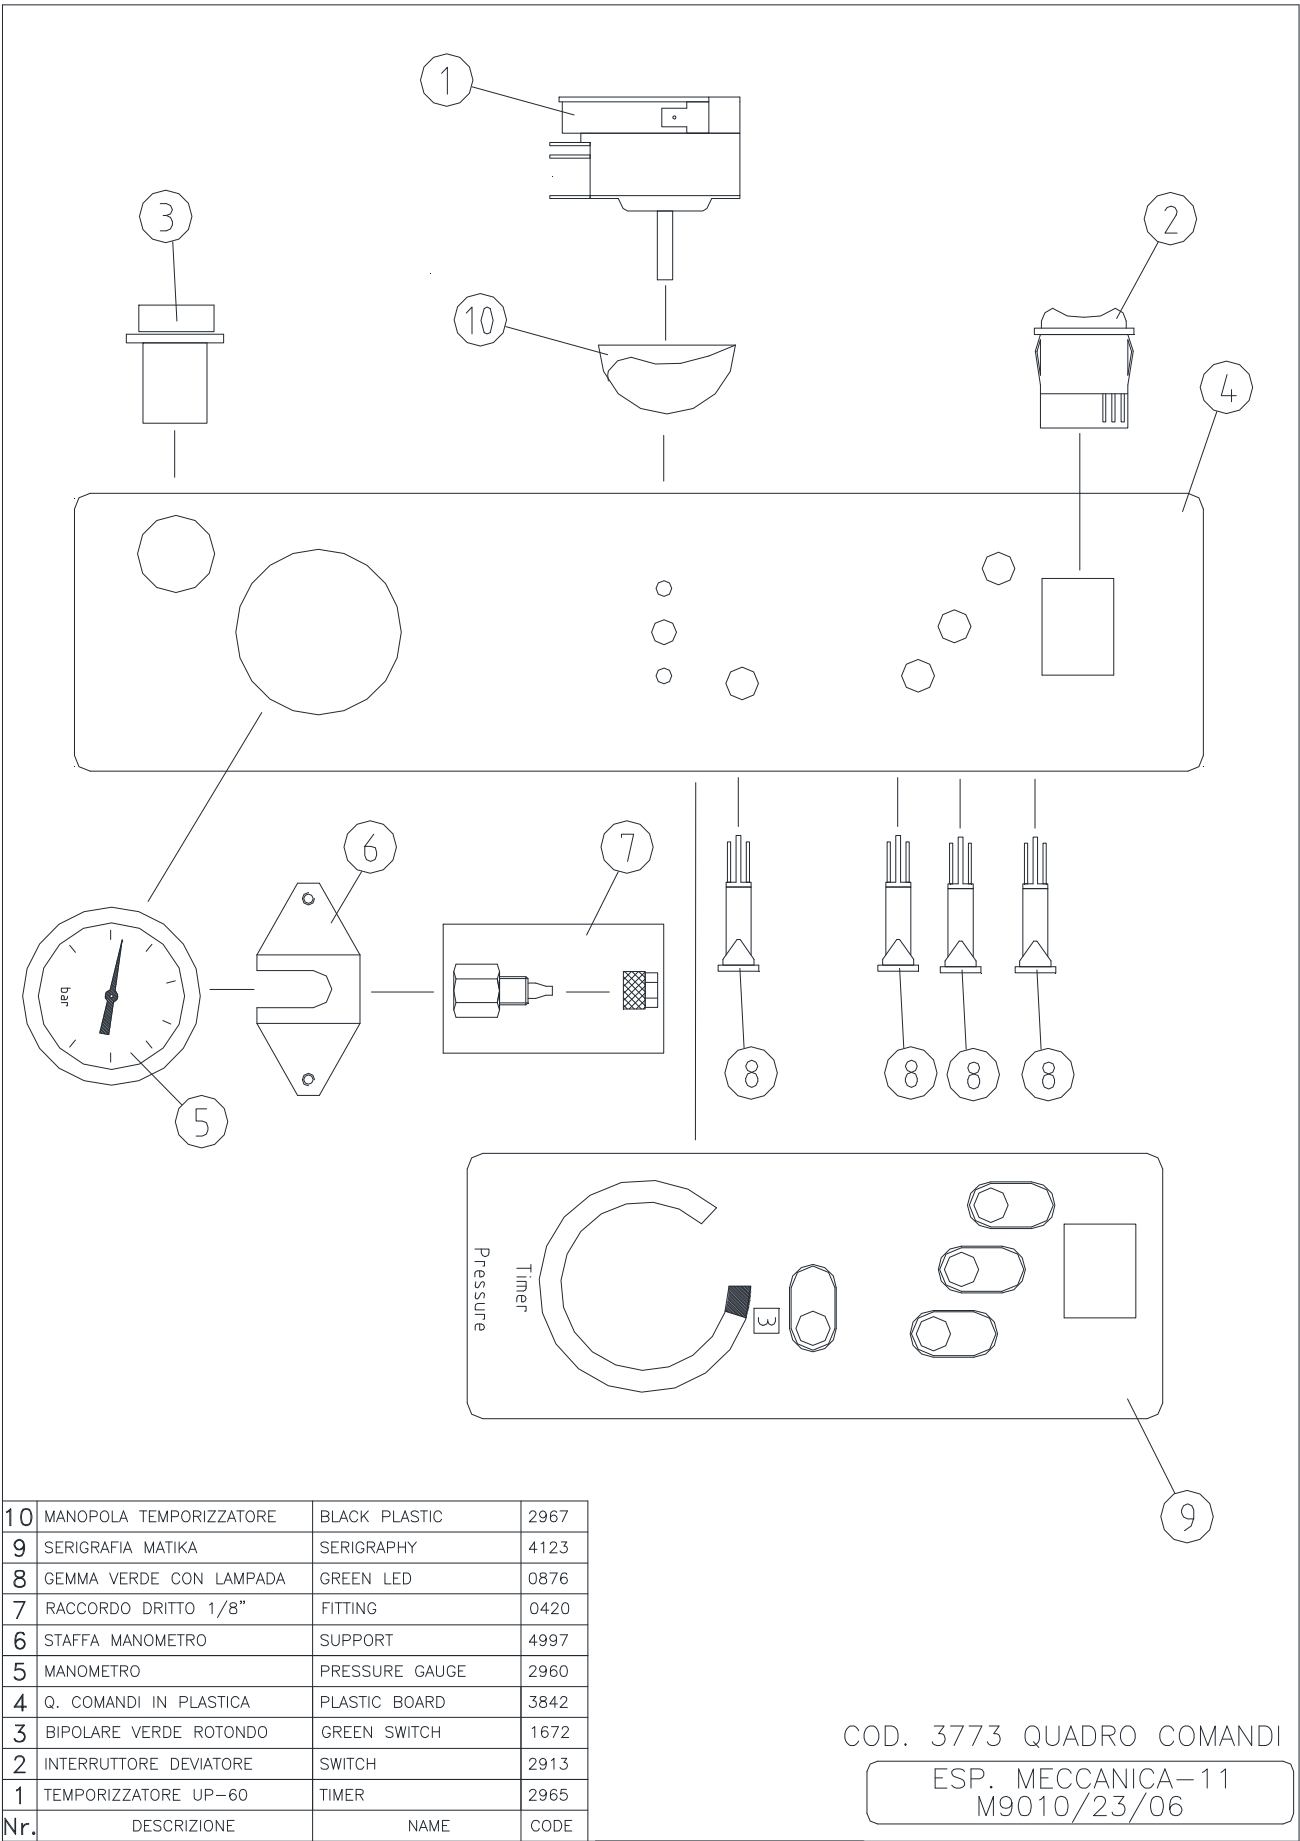

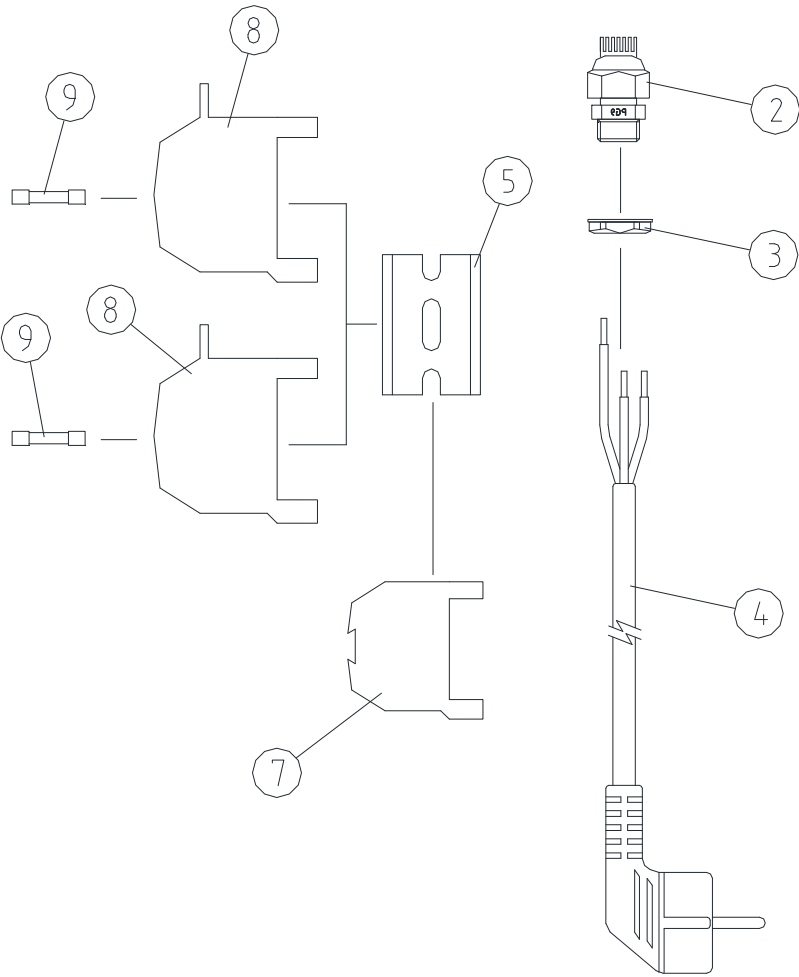

9	FUSIBILE RITARDATO 5X20 10A	FUSE - T	1127
8	MORSETTIERA PORTA FUSIBILE	TERMINAL BOARD	3234
7	MORSETTIERA TERRA Ø10	GREEN TERMINAL	0878
5	BARRA OMEGA PER MORSETTI	METAL BAR	0795
4	CAVO CON SPINA SHUKO	ELECTRIC HOSE WITH PLUG	0129
3	DADO PG9 HUMMEL	NUT	0567
2	PRESSACAVO PG9 HUMMEL	FIX CABLE	0562
Nr.	DESCRIZIONE	NAME	CODE

ESP. MECCANICA-12
M9010/23/06